

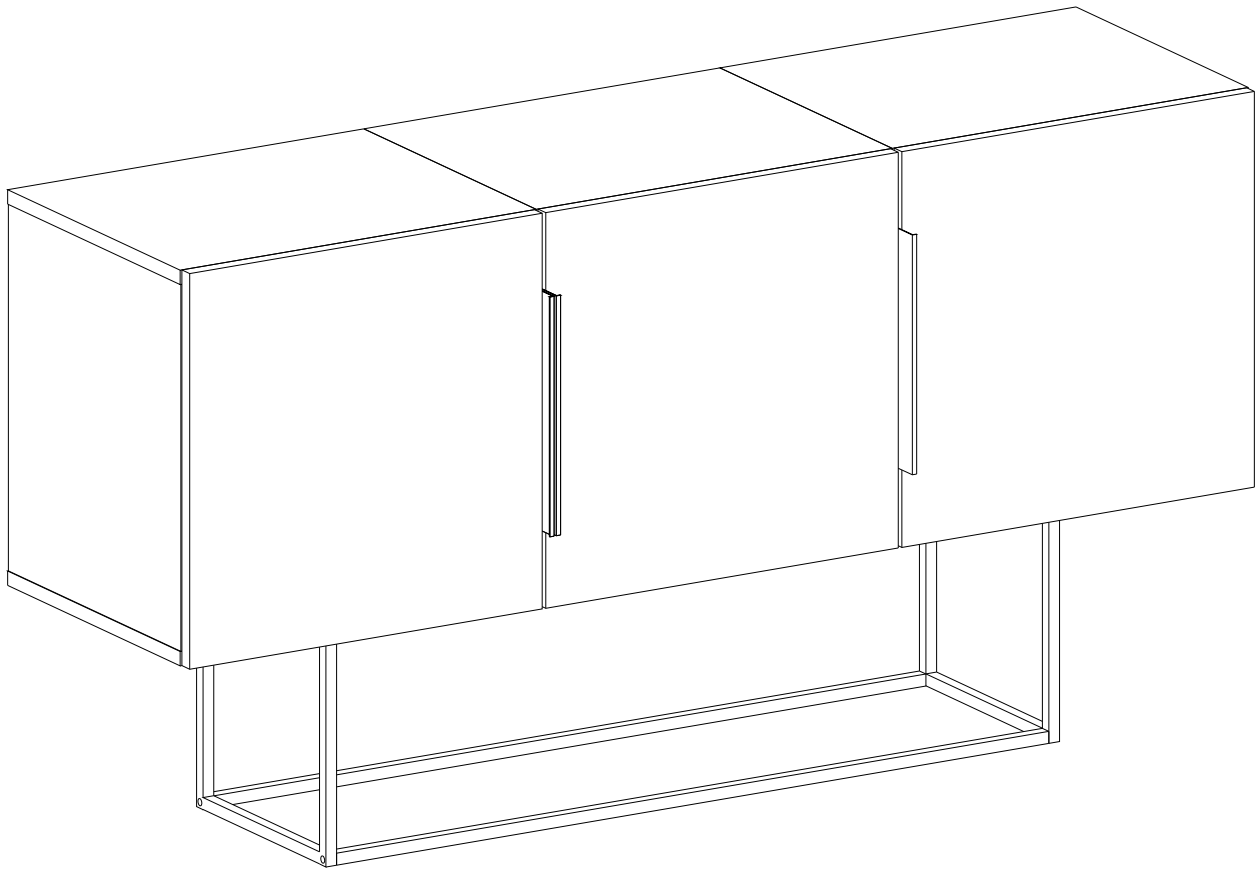
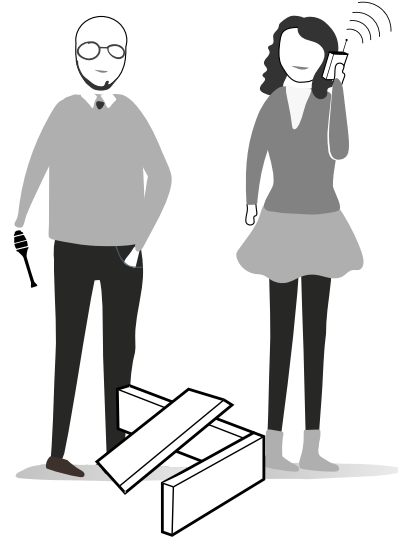
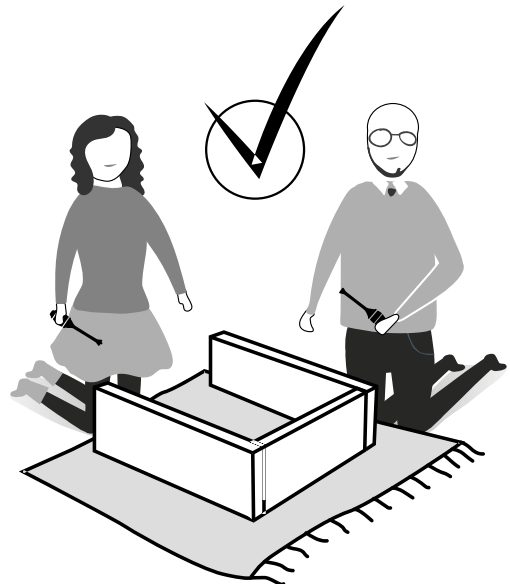
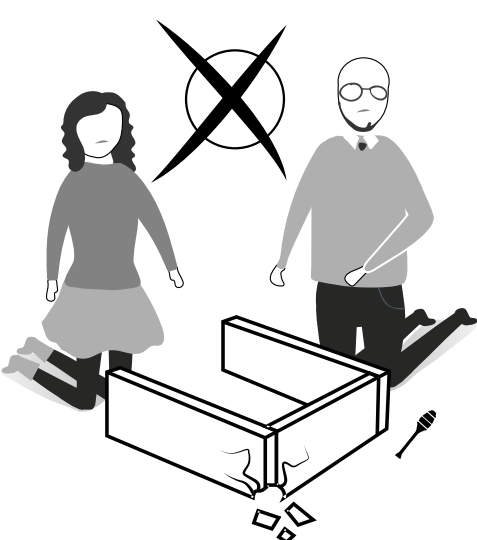



TOTTI

141307

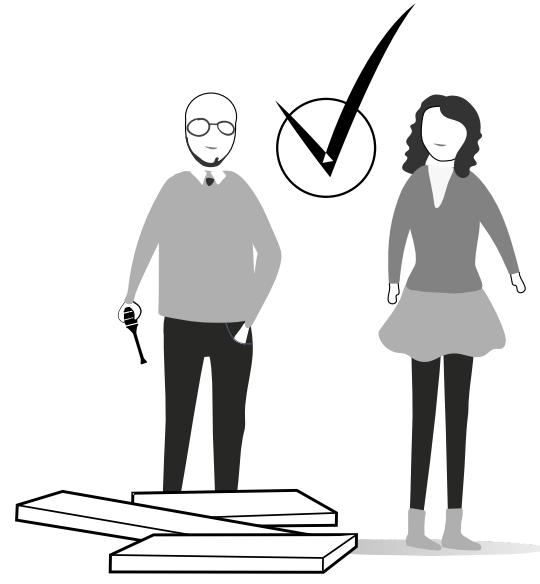


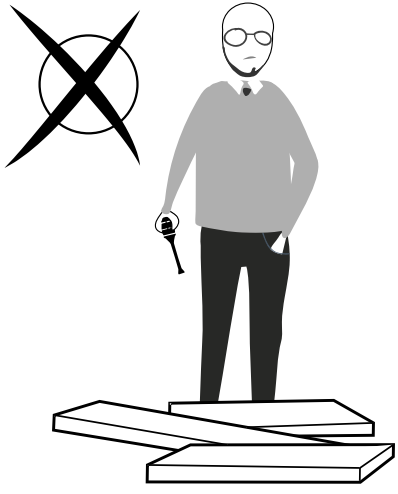


A04

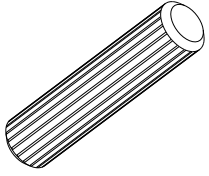


A23

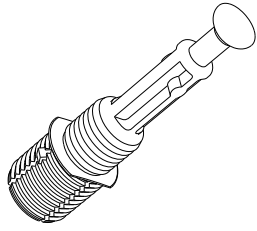


A22

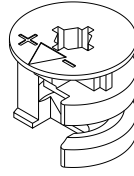


A12

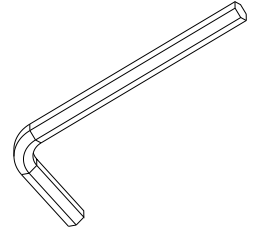


1

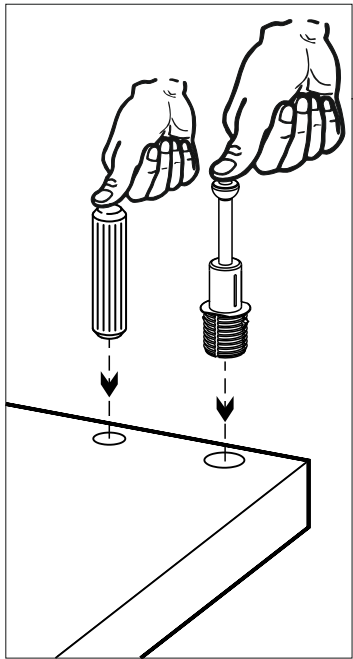




2

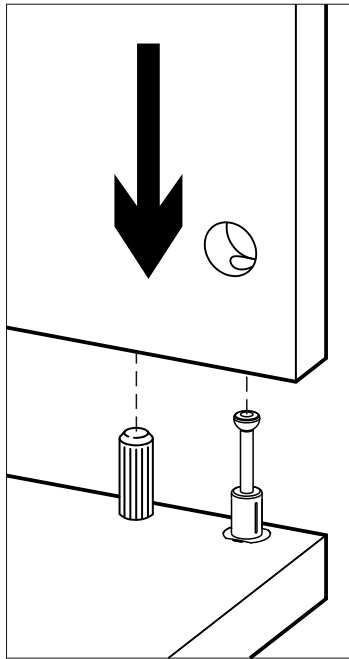












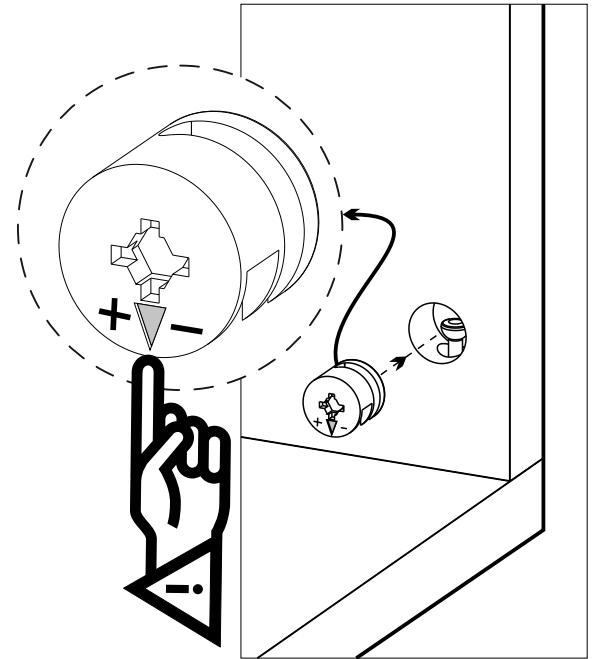



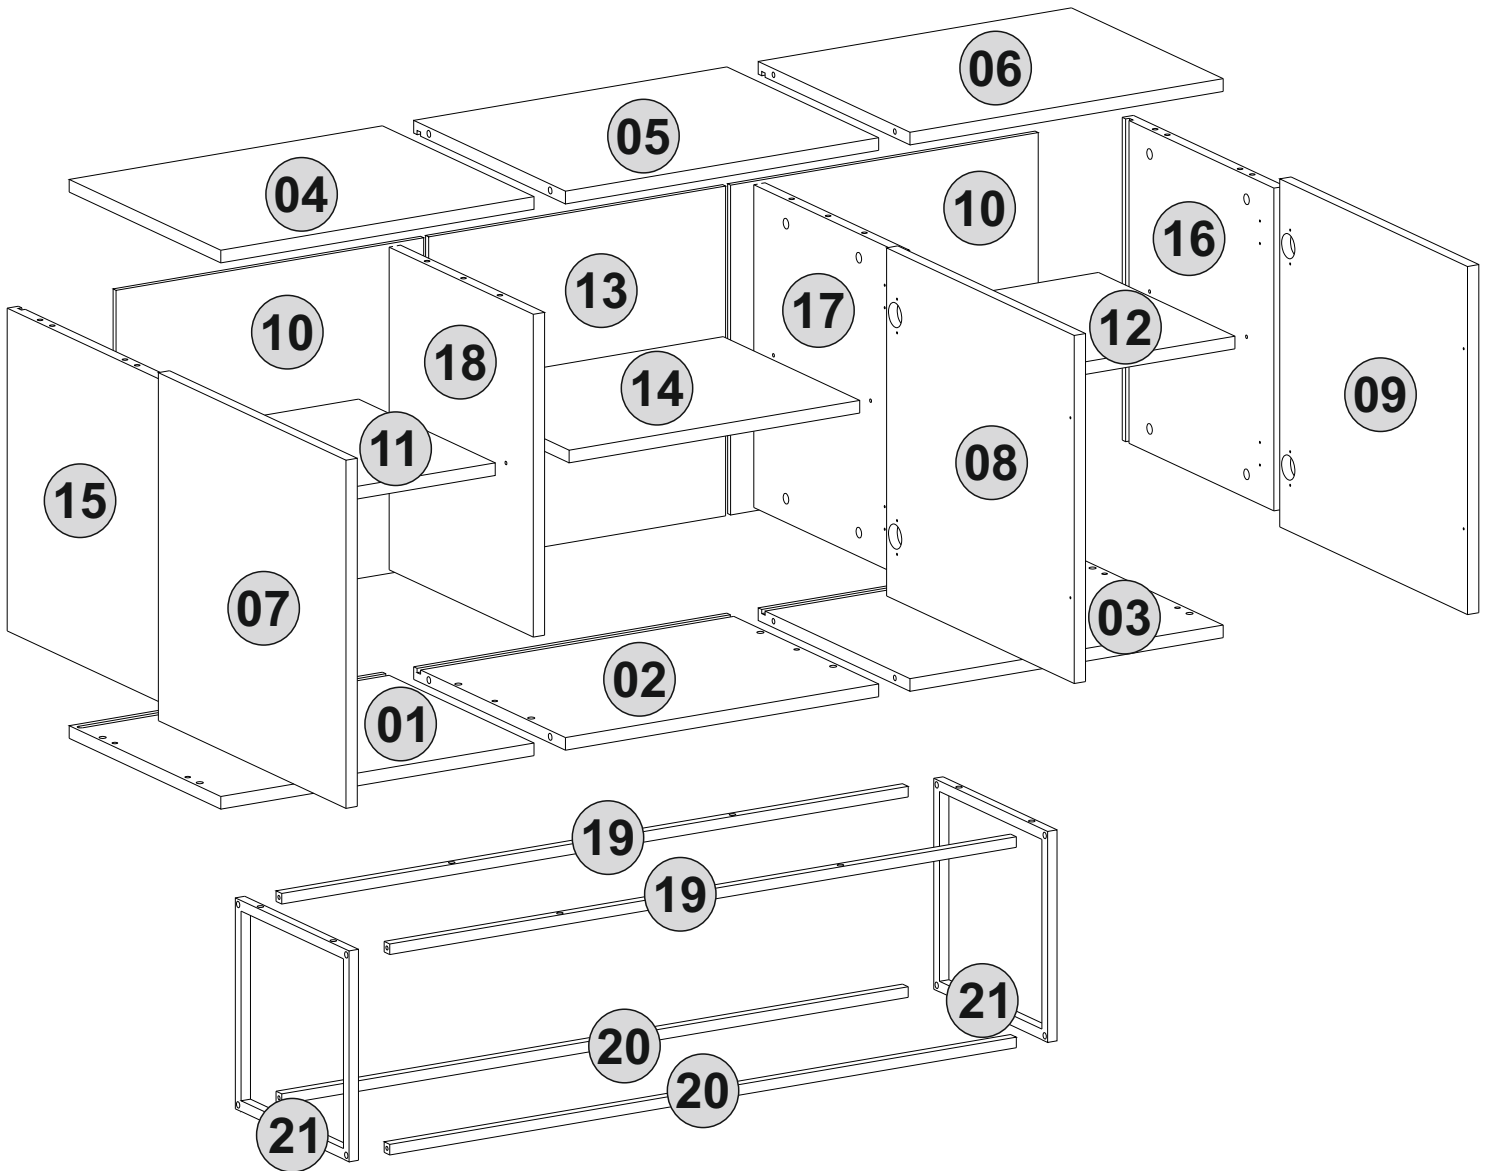
3

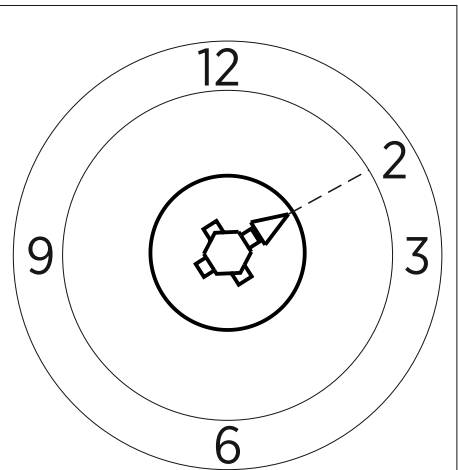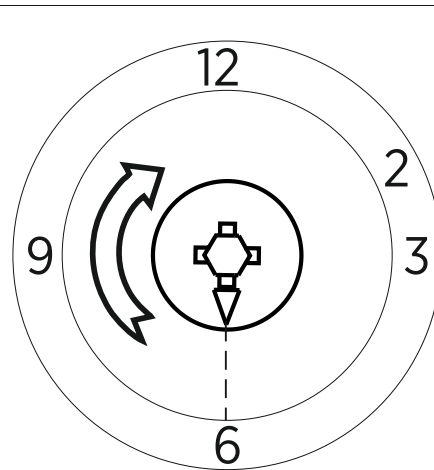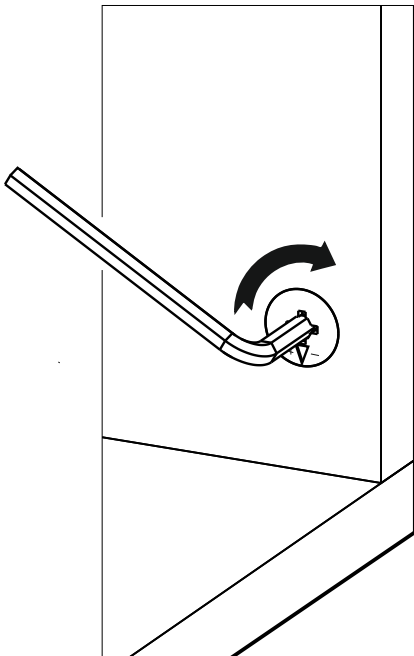


4




A22  24x	A23  24x	A04  12x	A12  1x	A48  12x
A06  18mm C1-8x C2-8x C3-8x	C14  3x	C17  3x	C20  6x	A18  3,5x18 48x
A69  8x	B13  16x	A25  12x	Z70  3x	A50  3,5x16 6x




1.

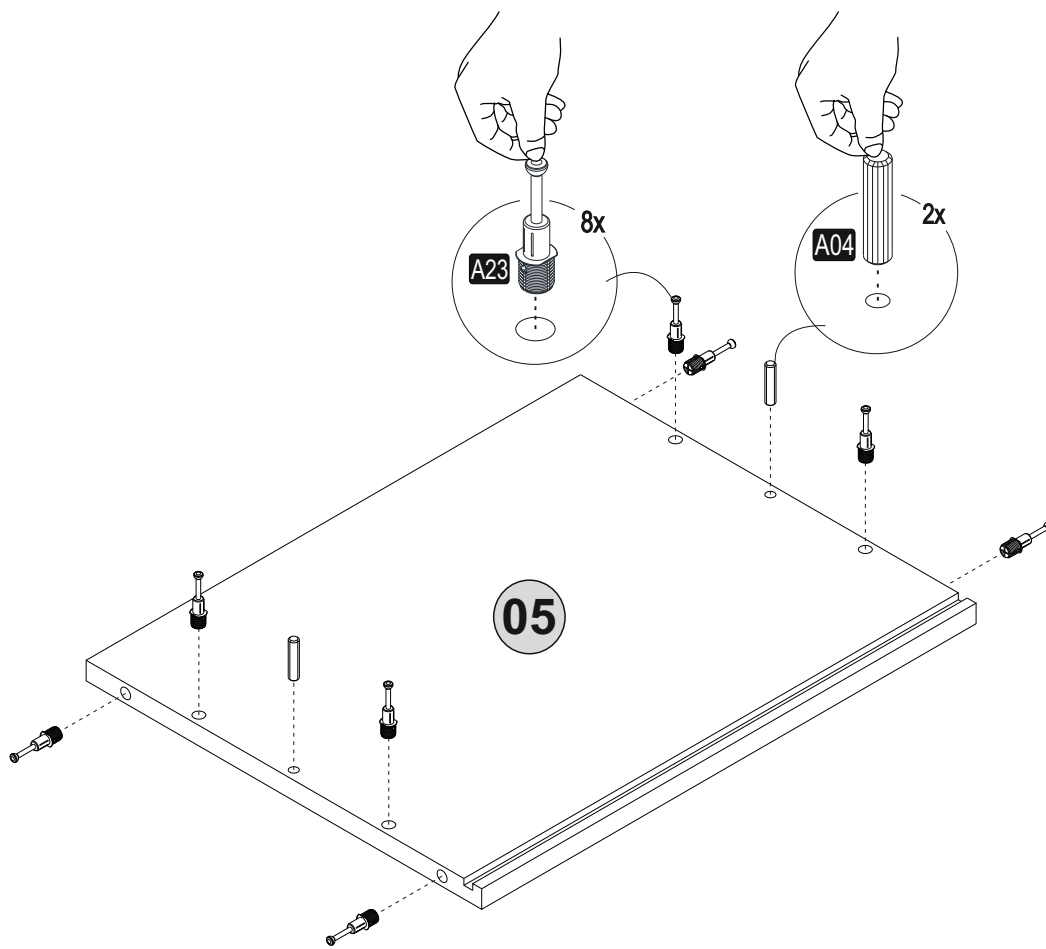


2.

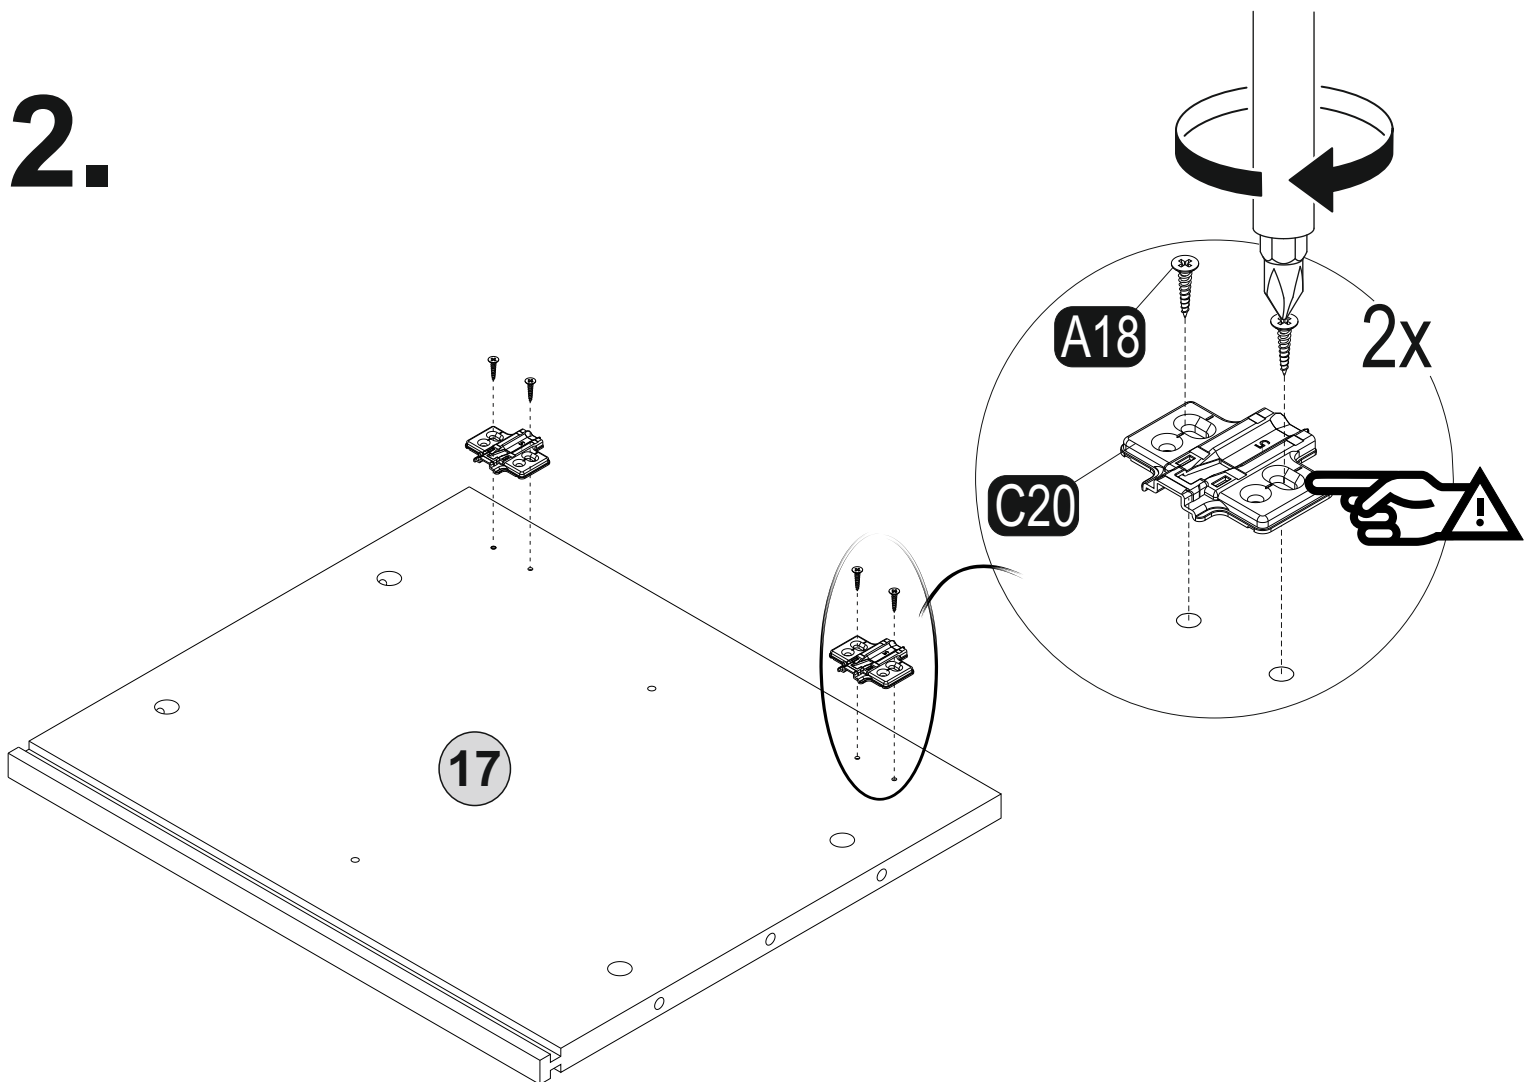


3.

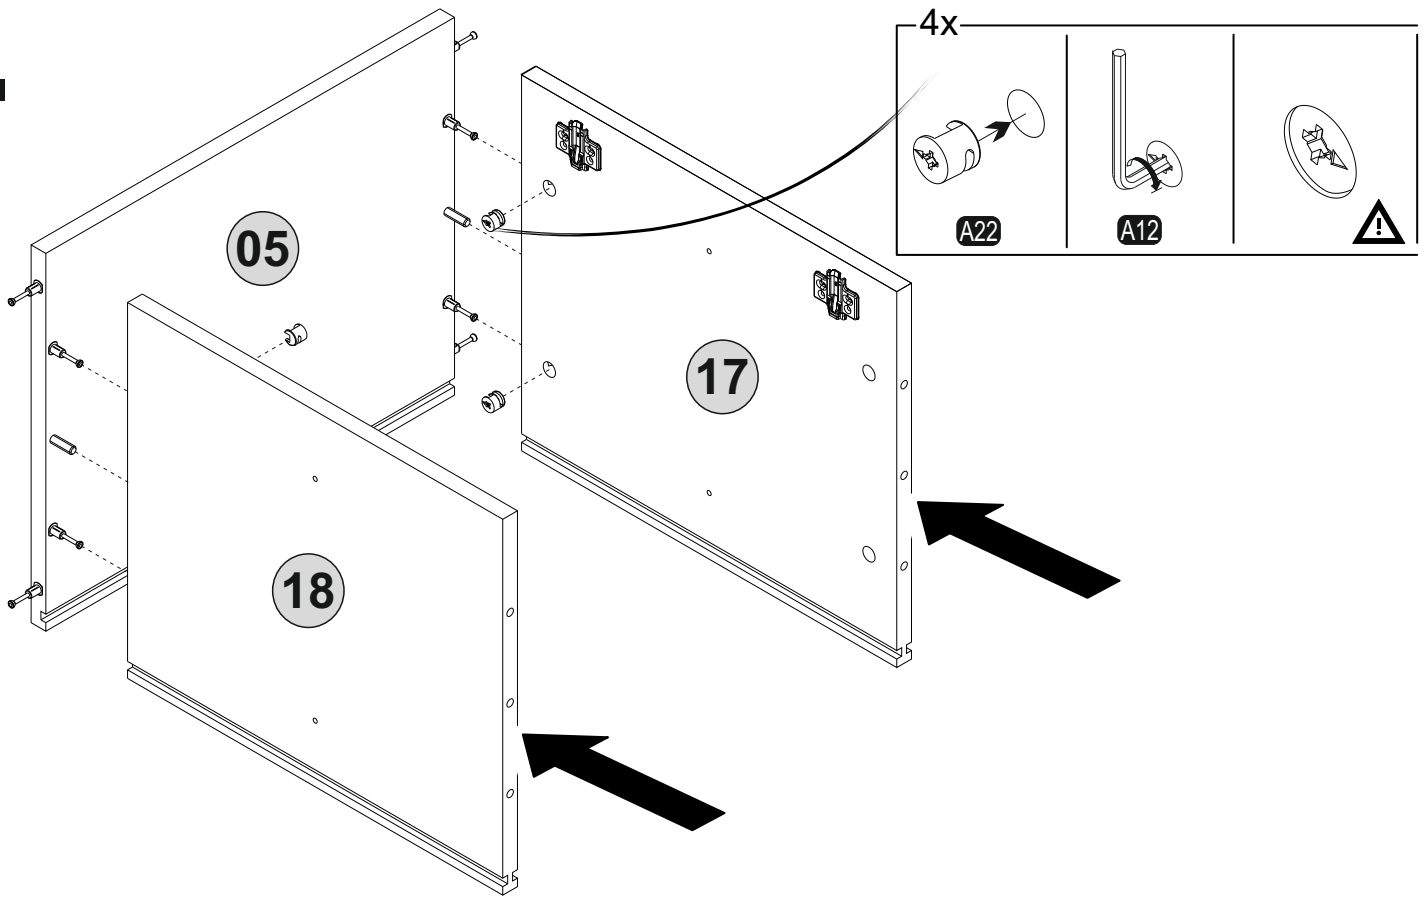


4.

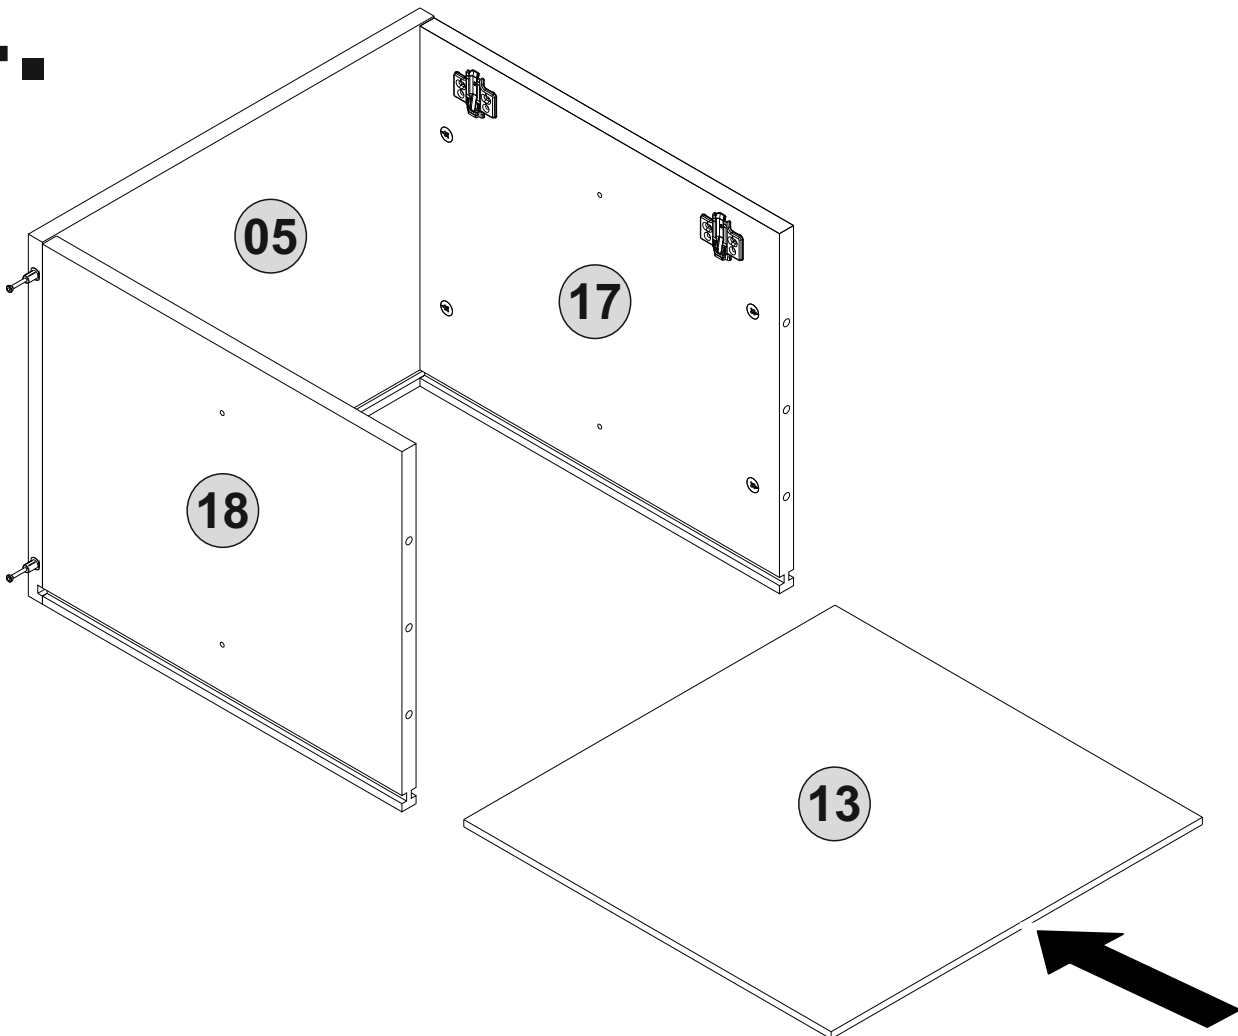


5.

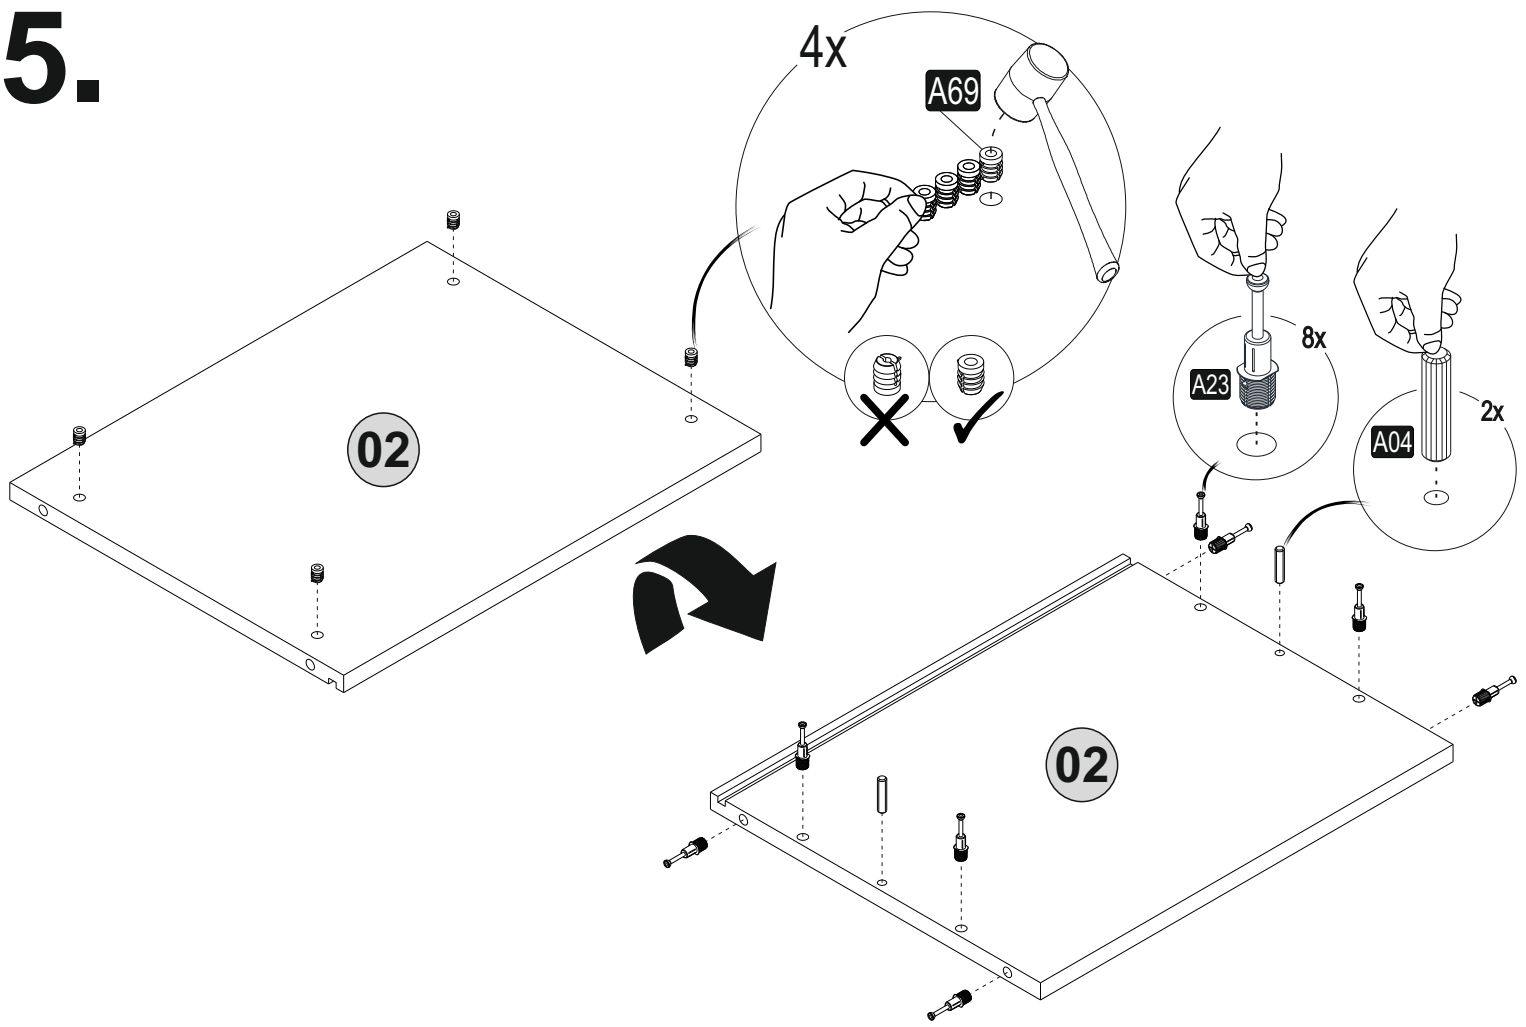


6.

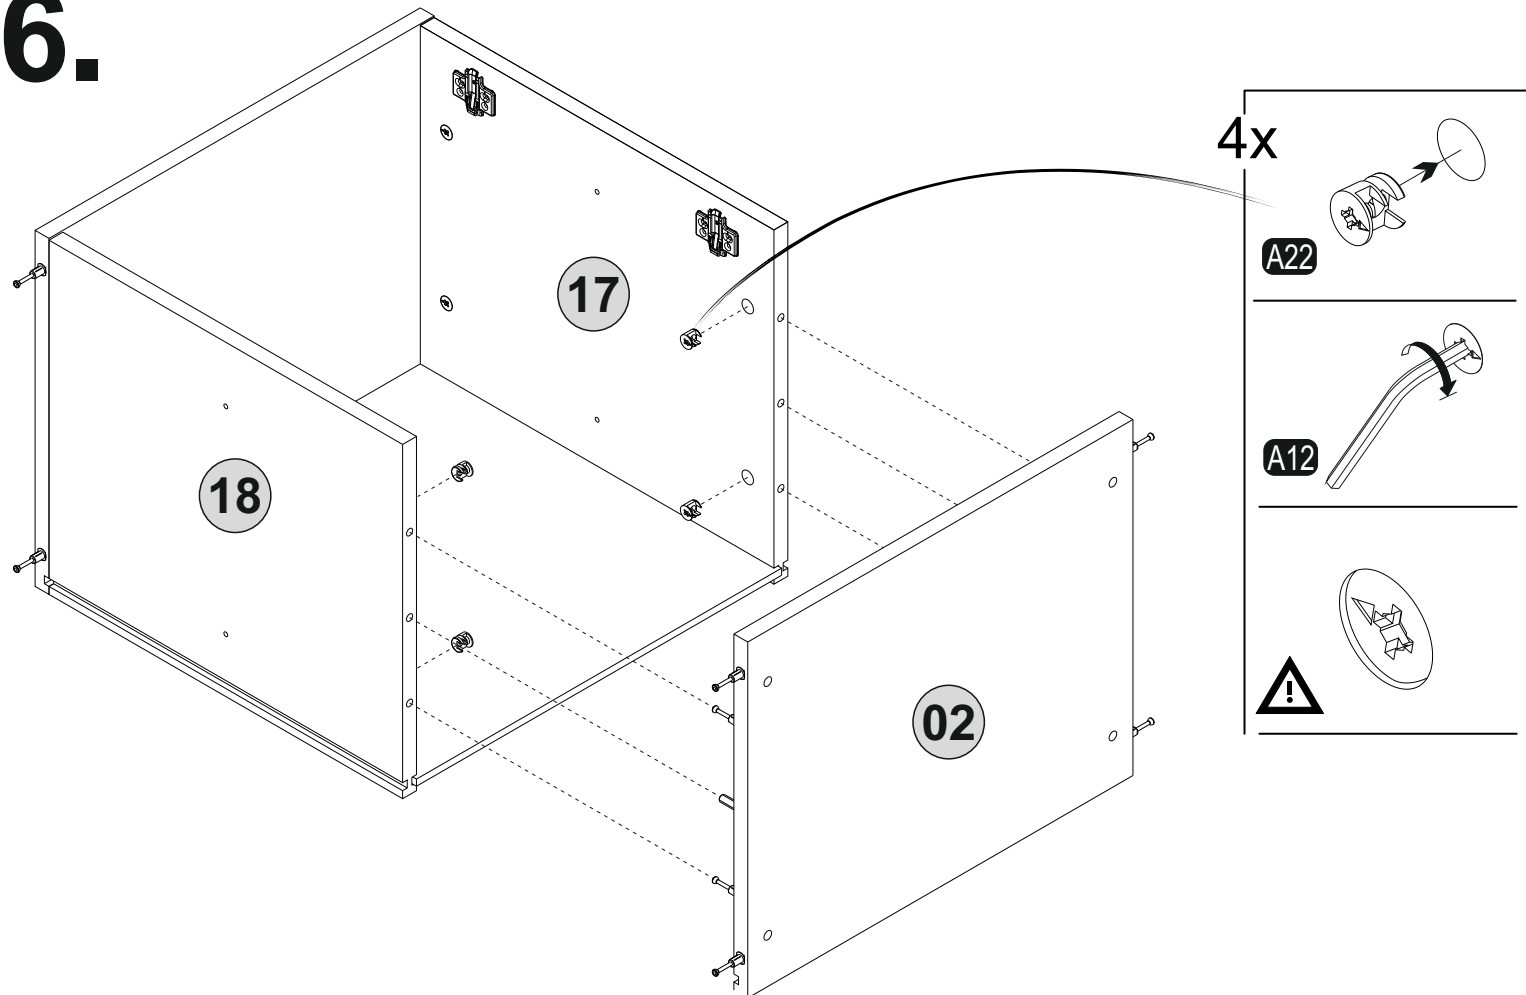


7.

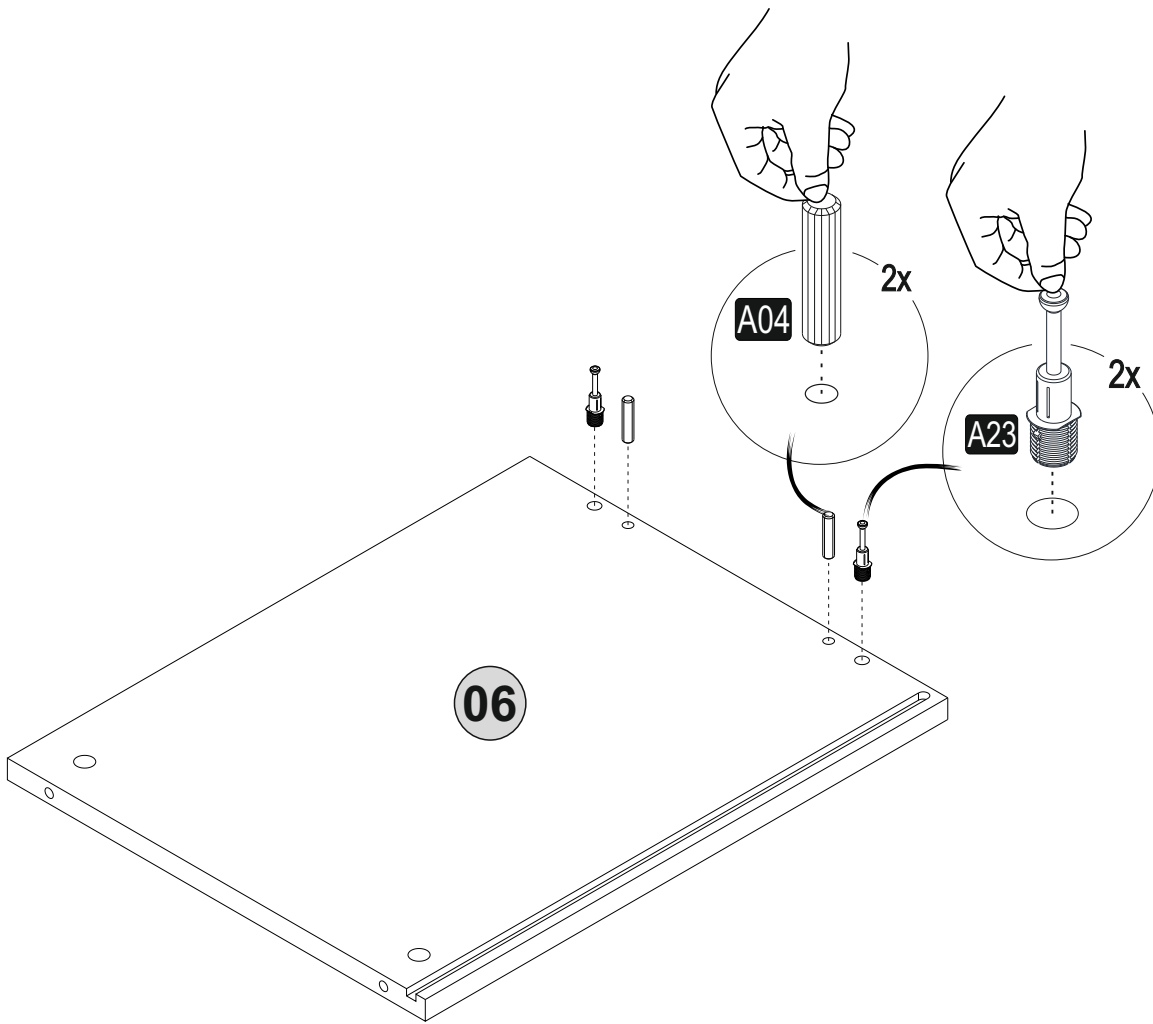


8.

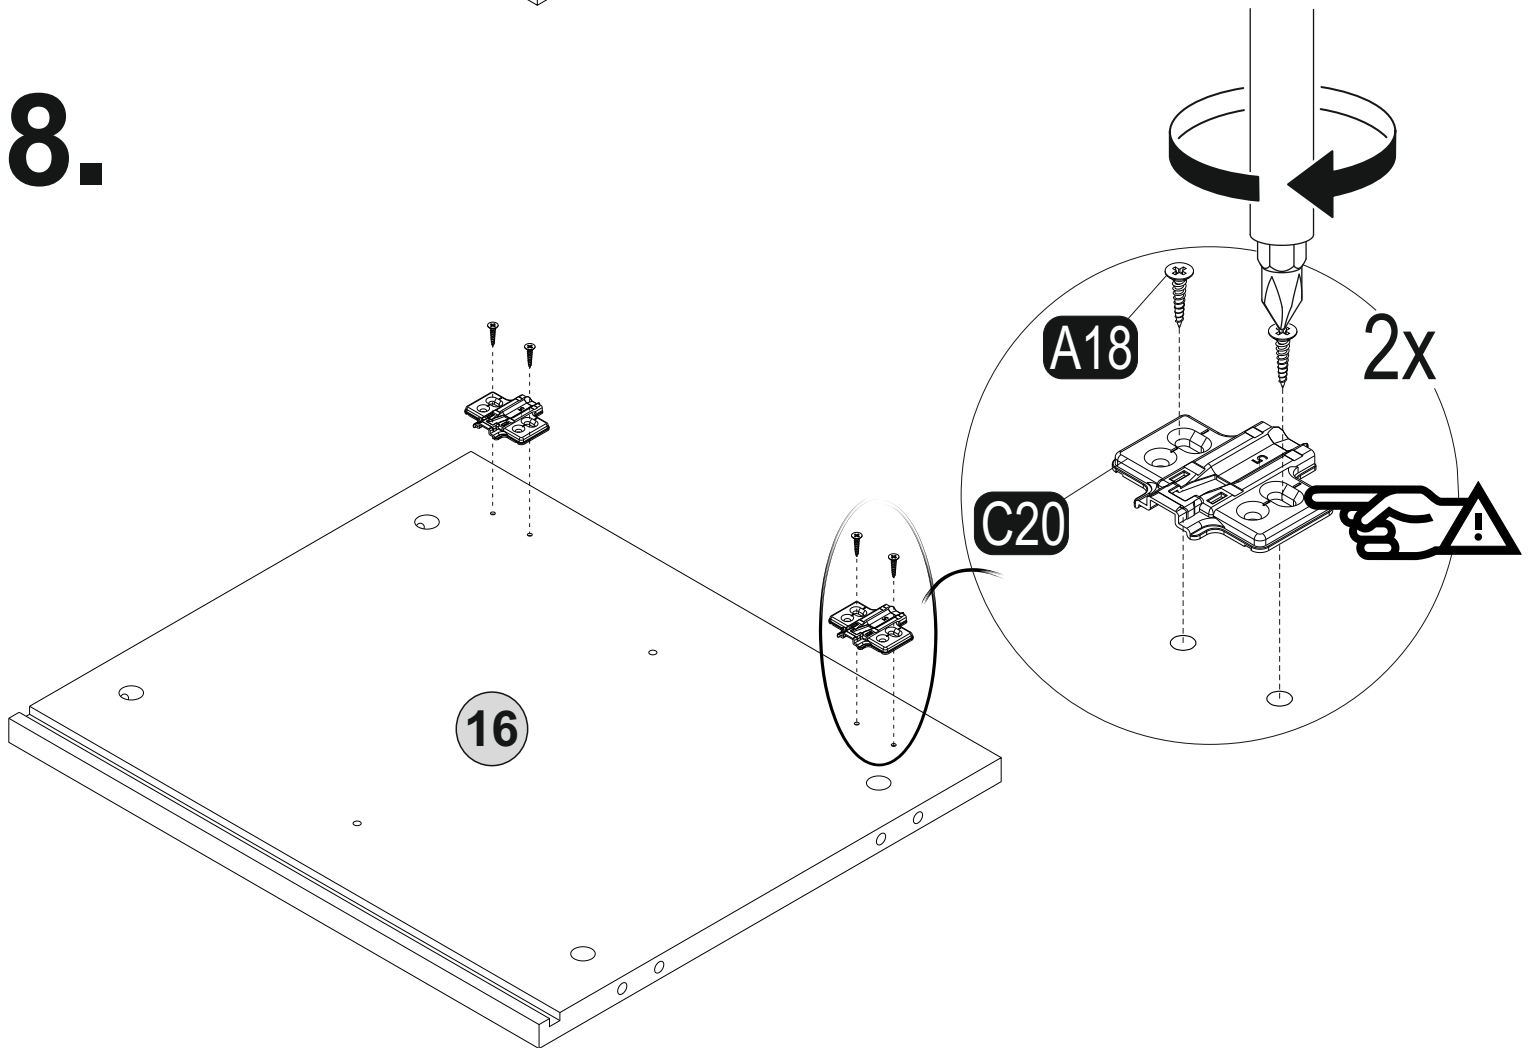


9.

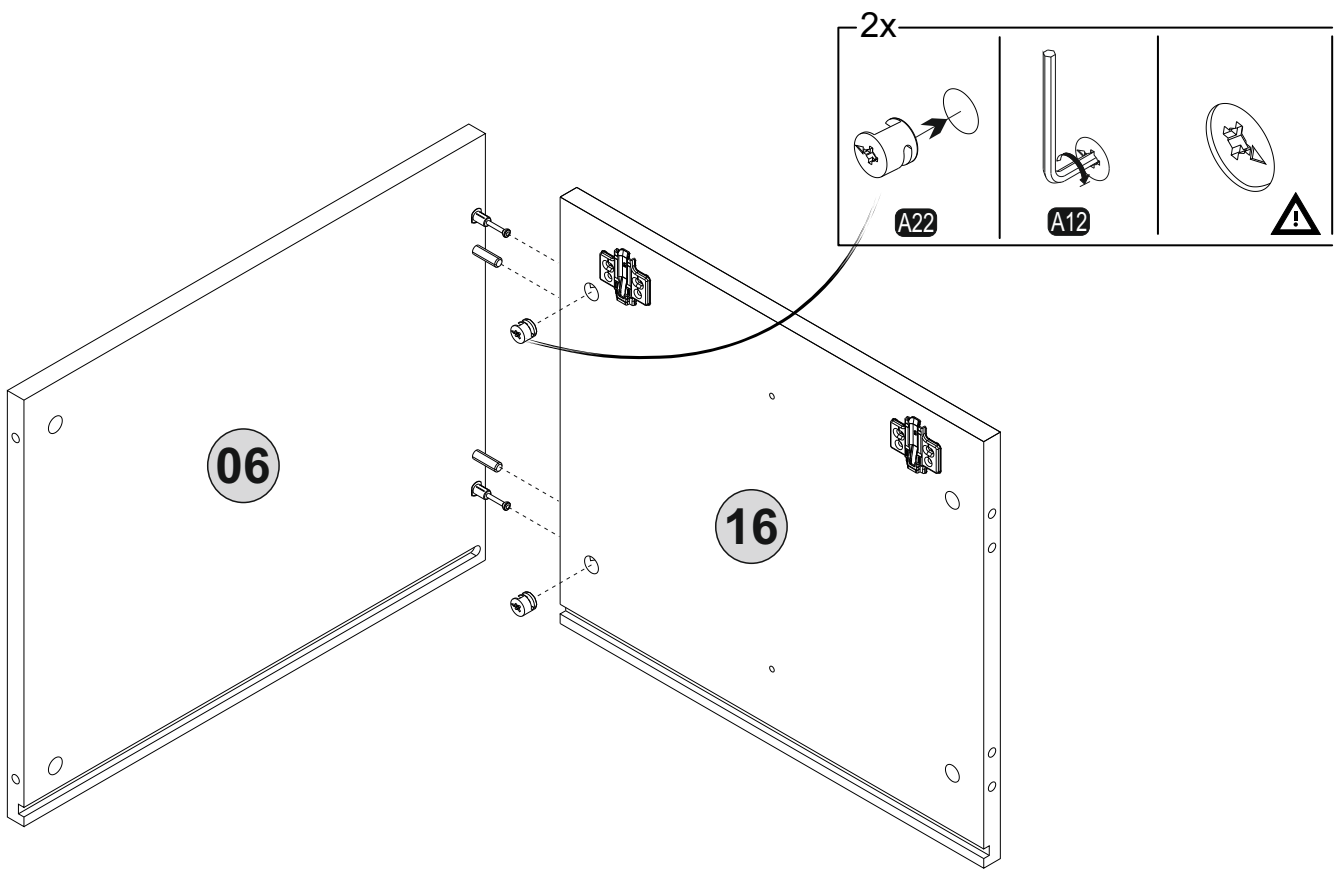


10.

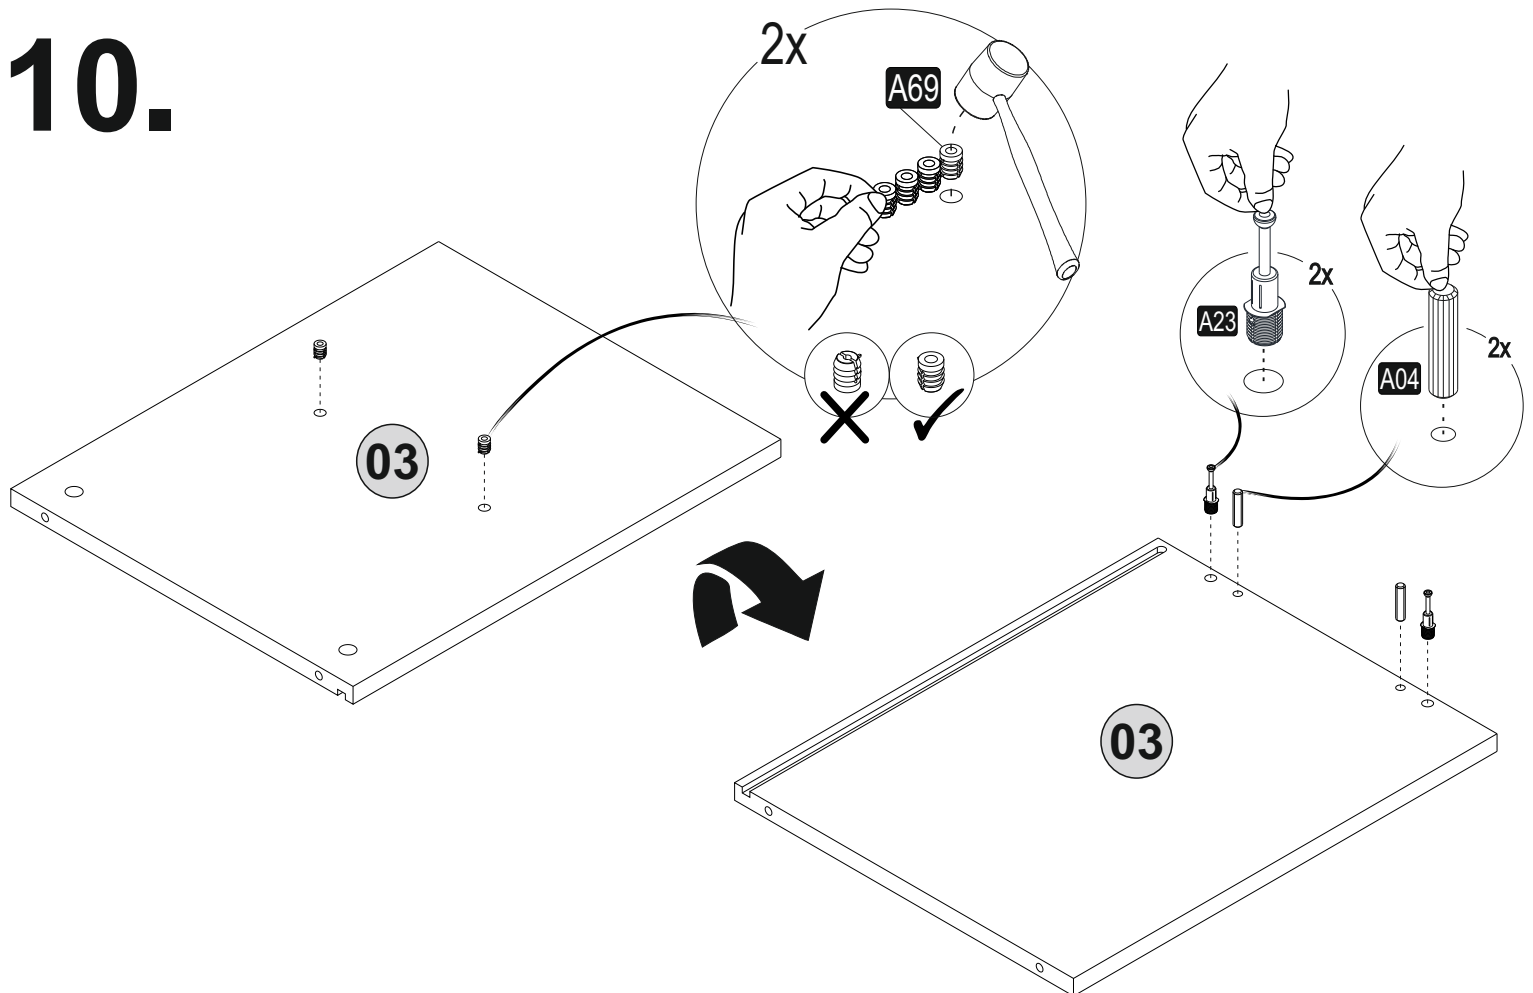


11.

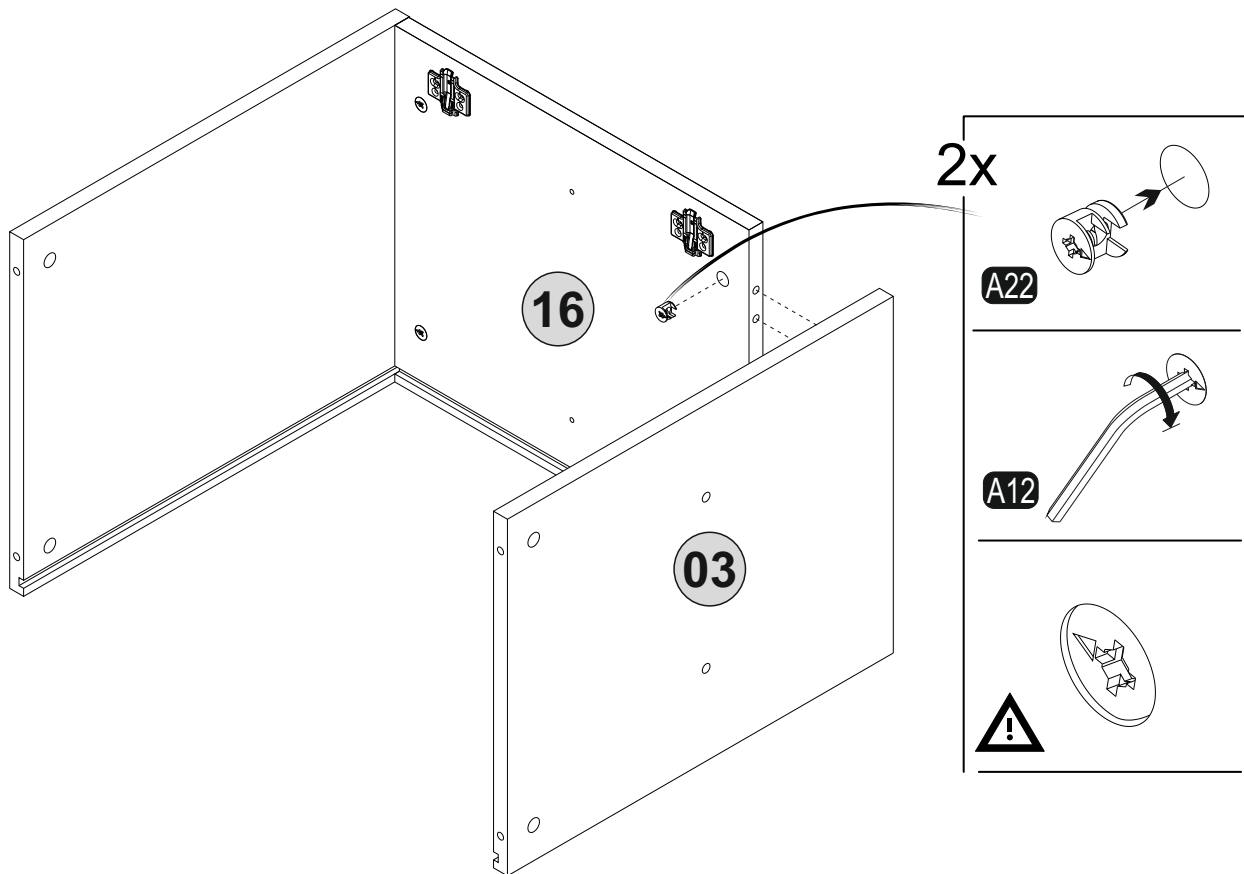


12.

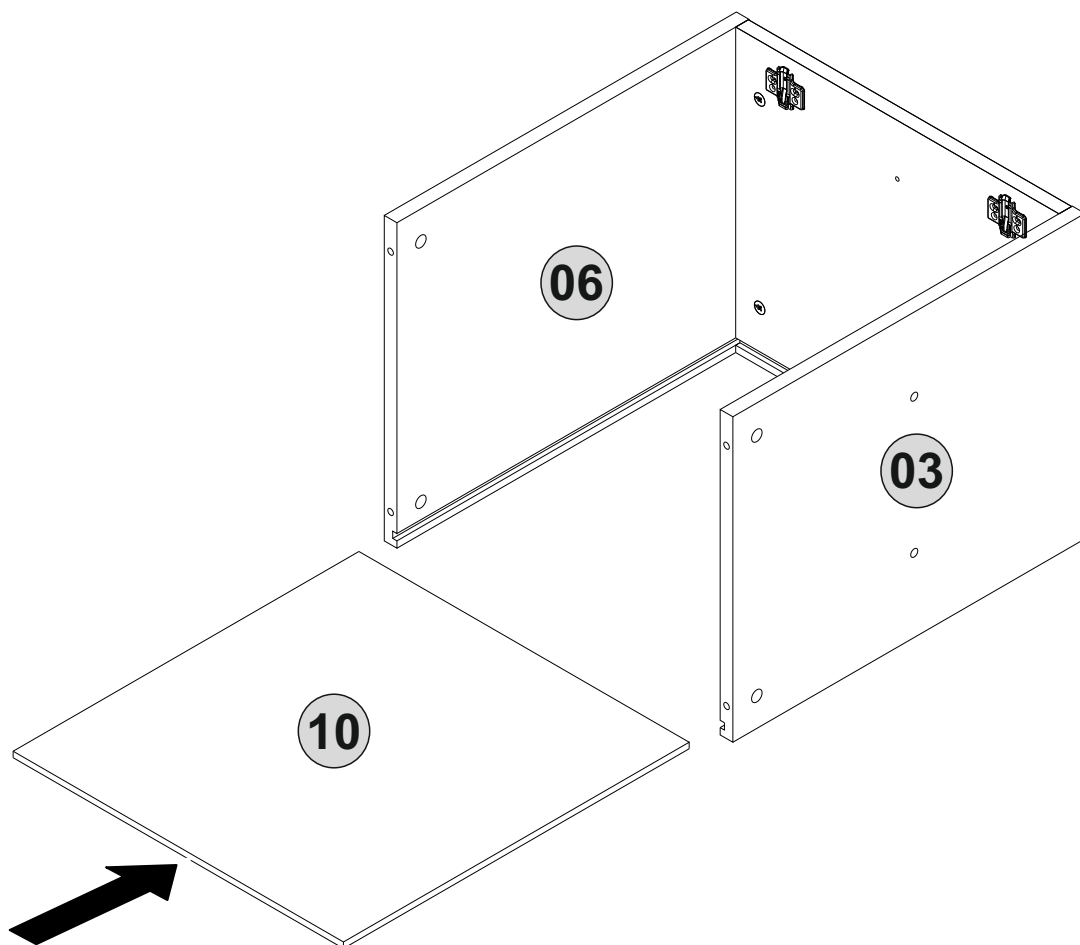



13.

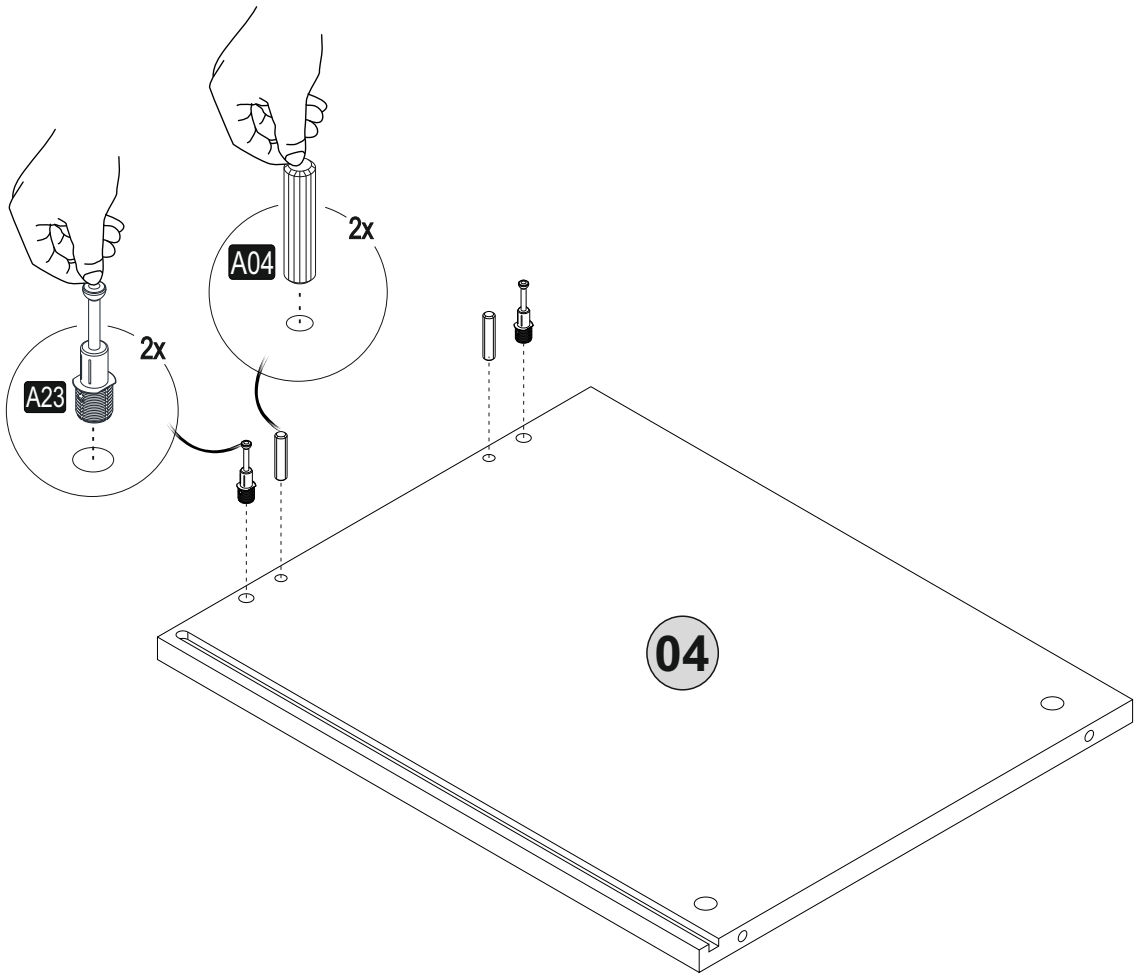


14.

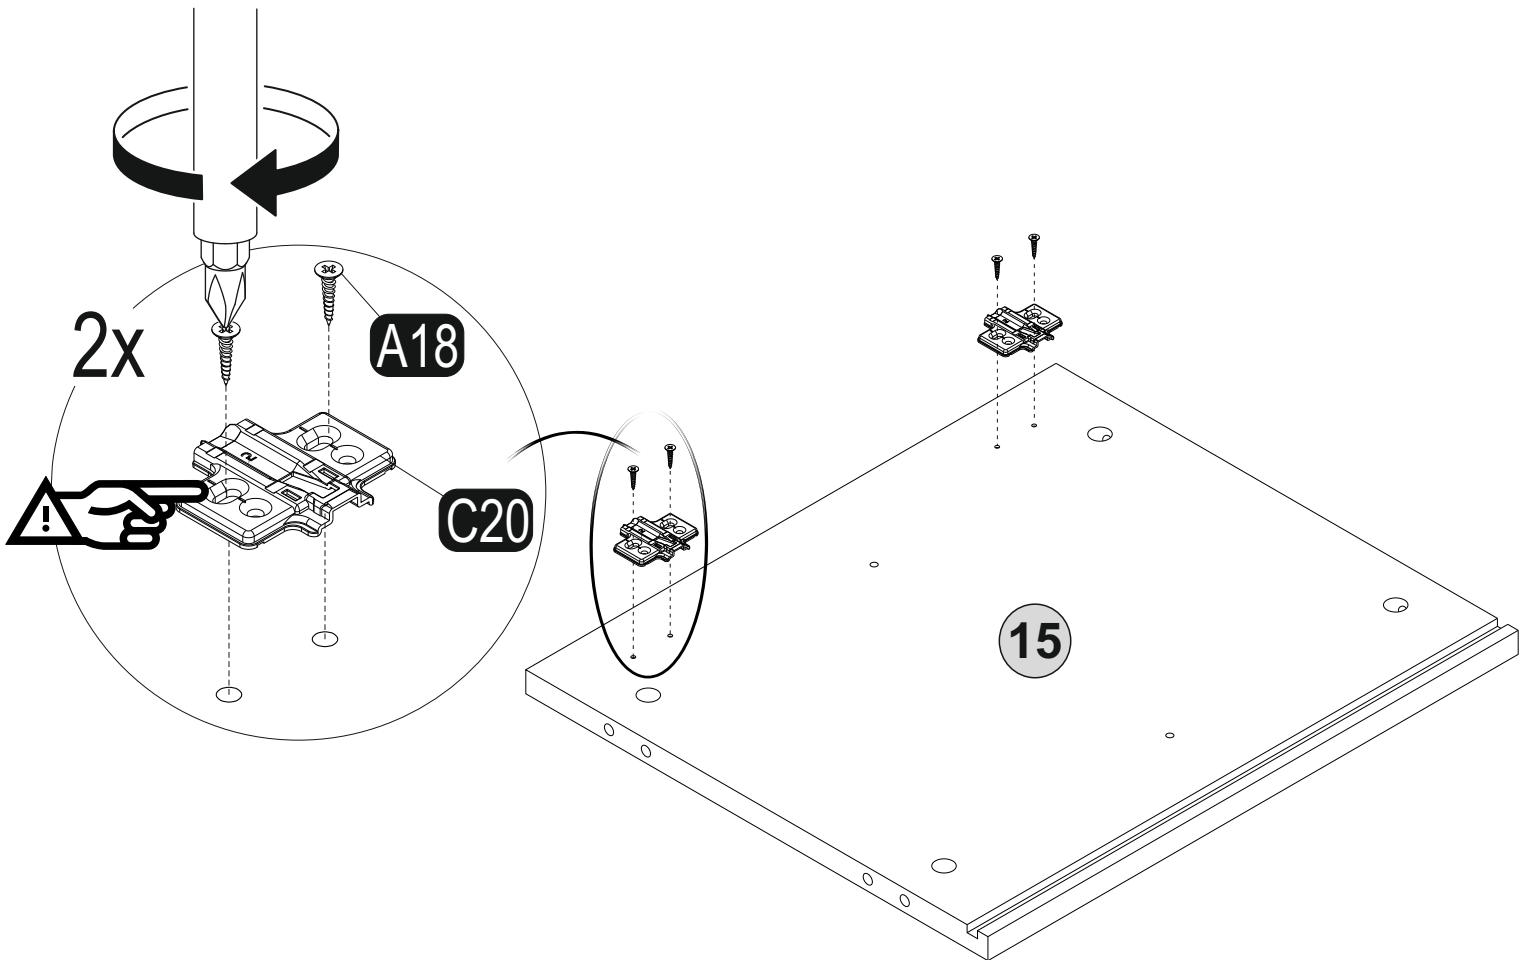


15.

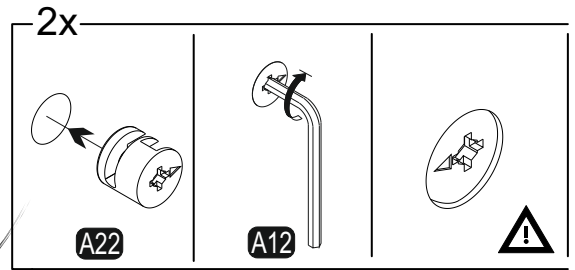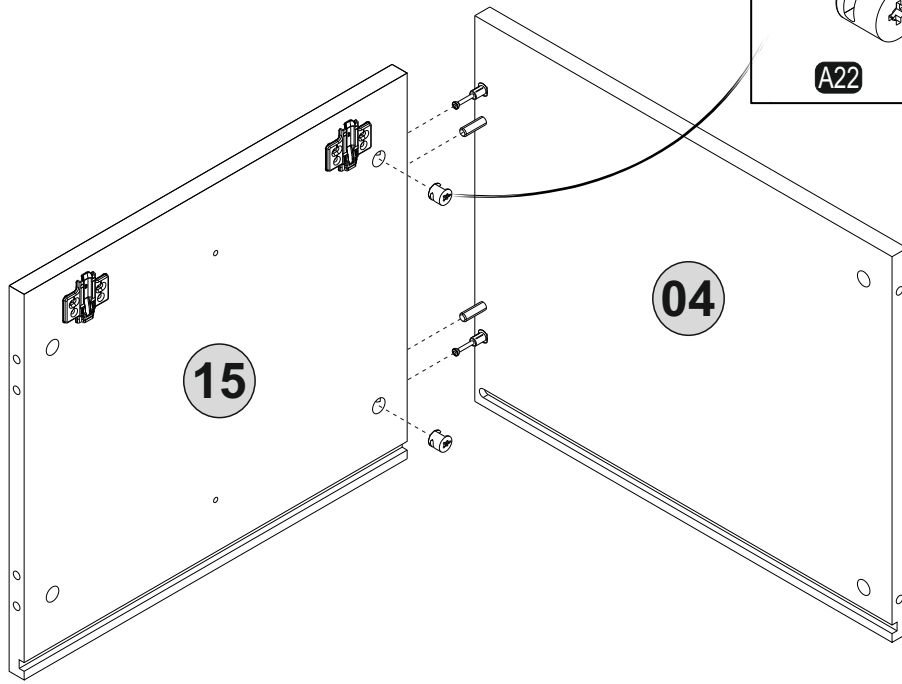


16.

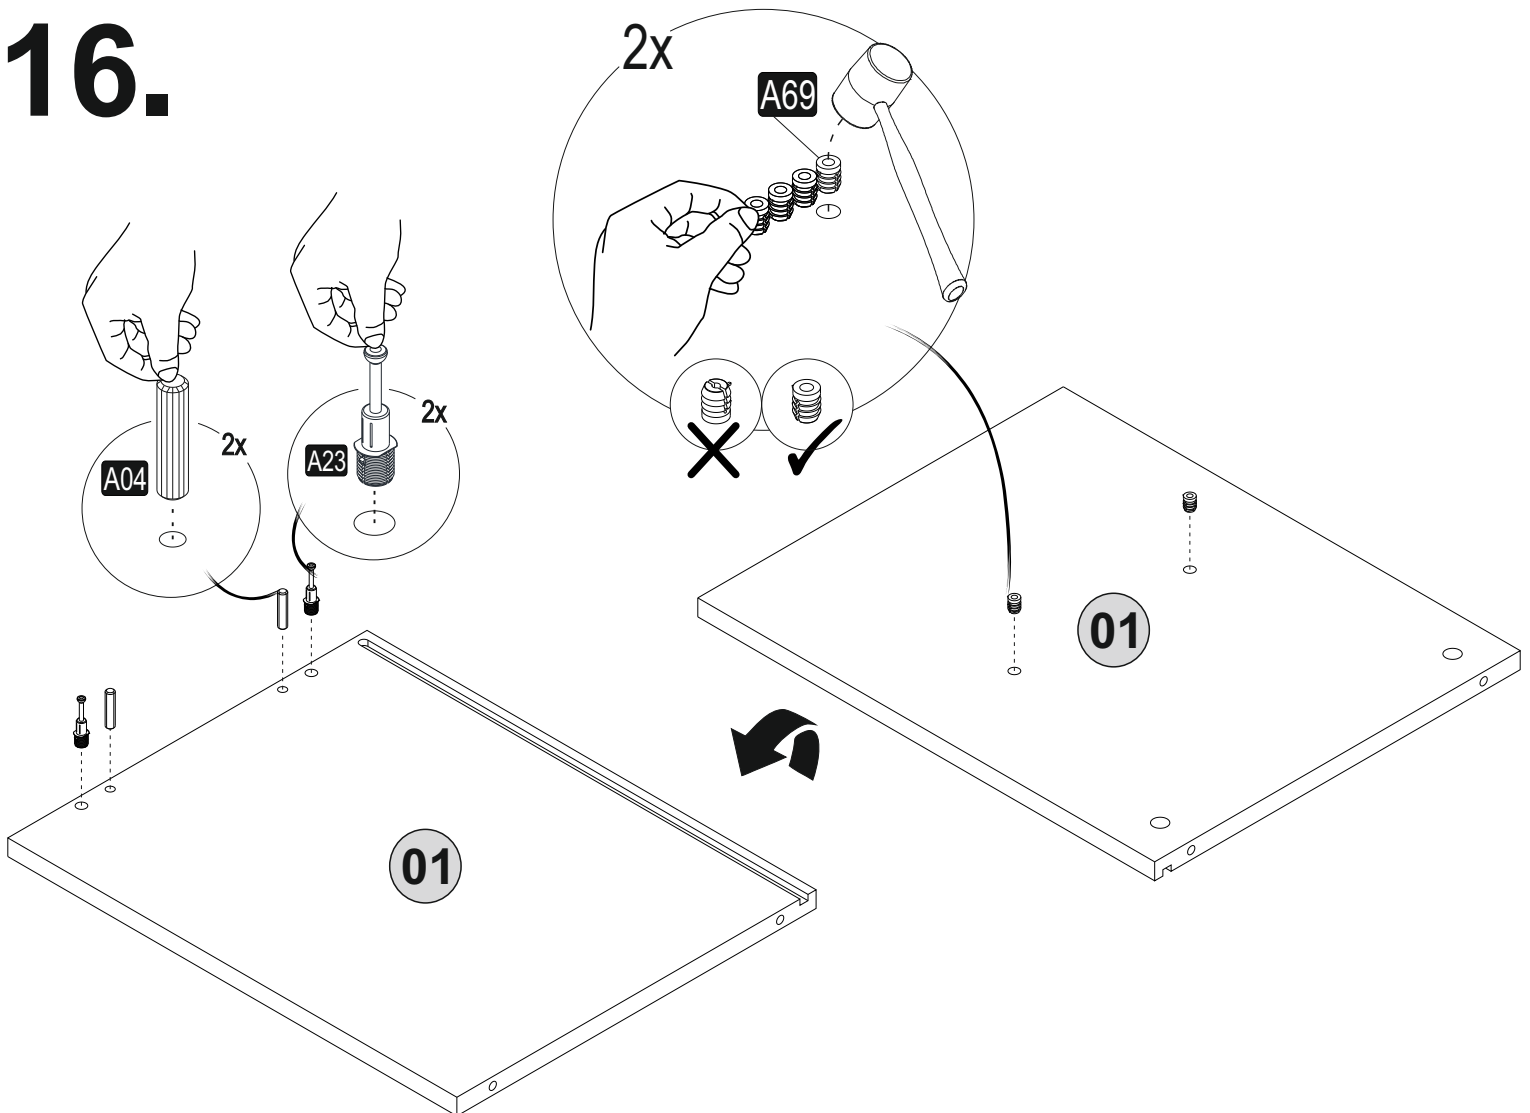


17.

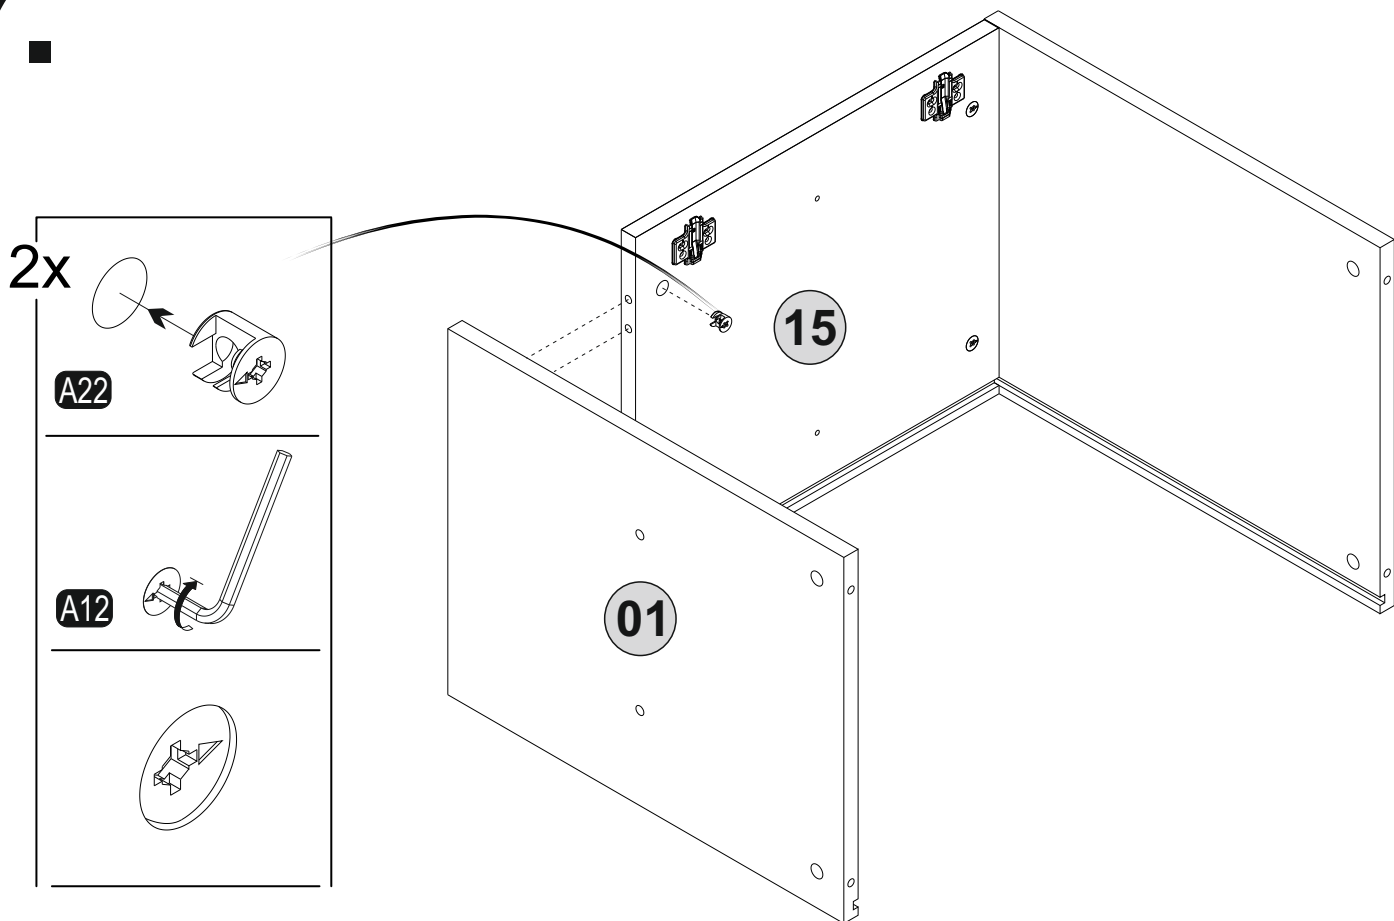


18.

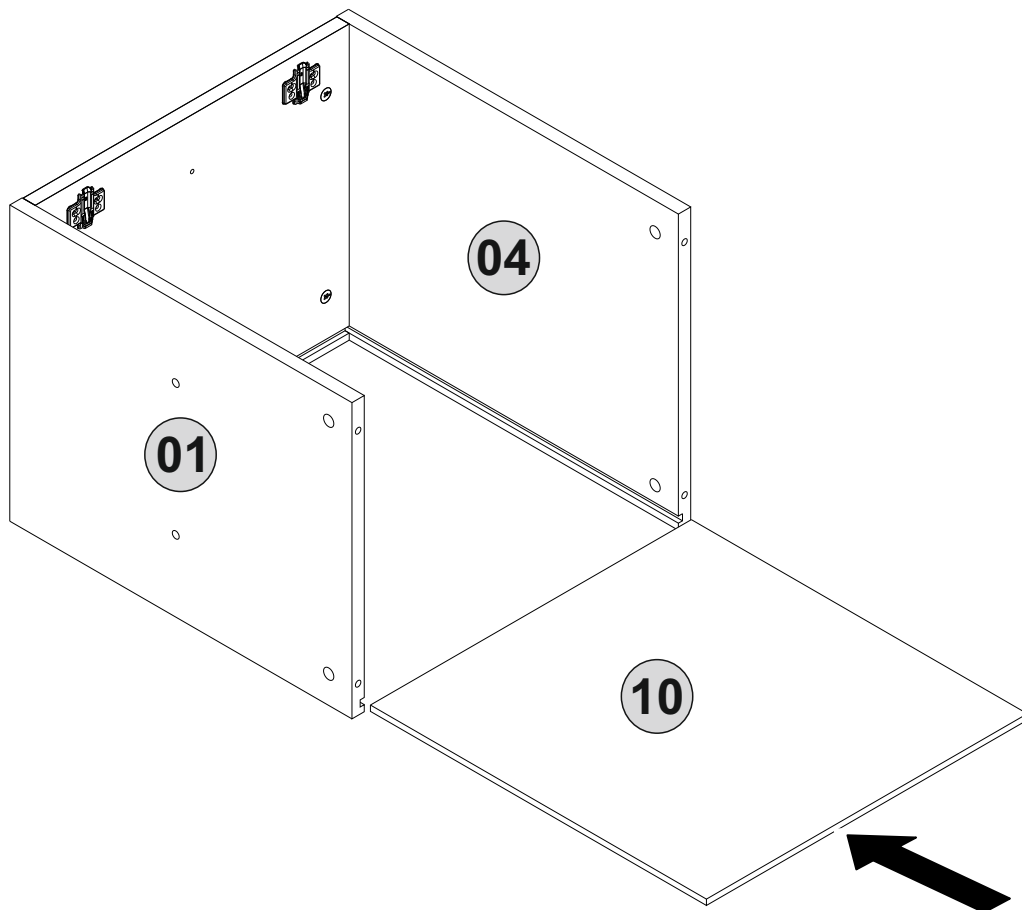


19.

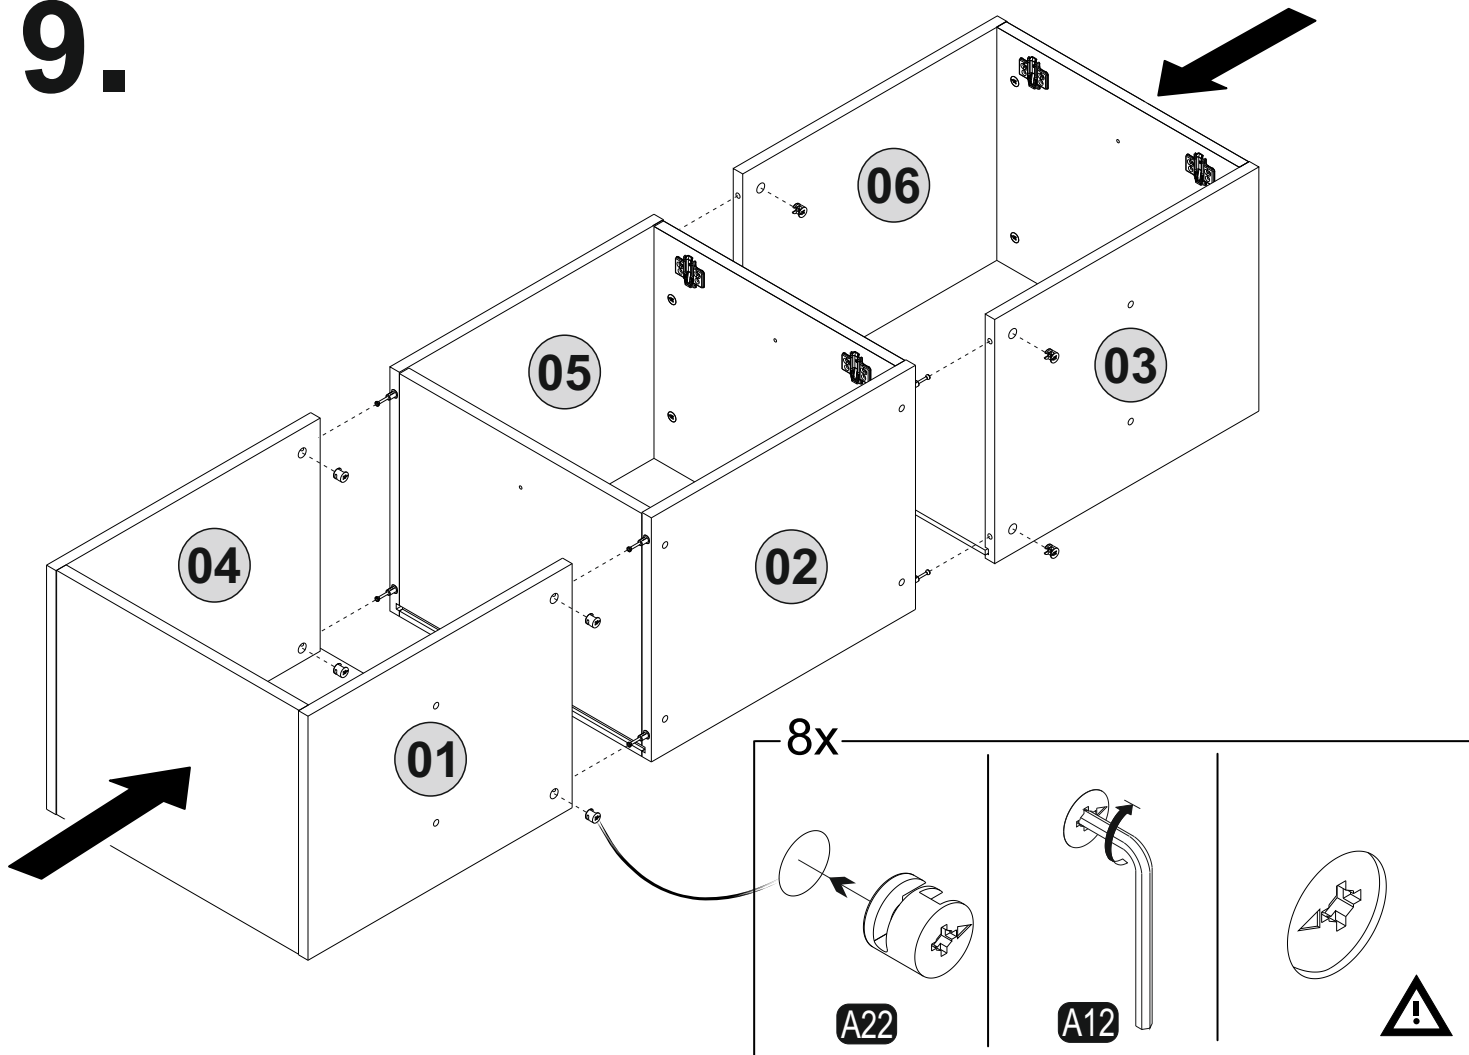


20.

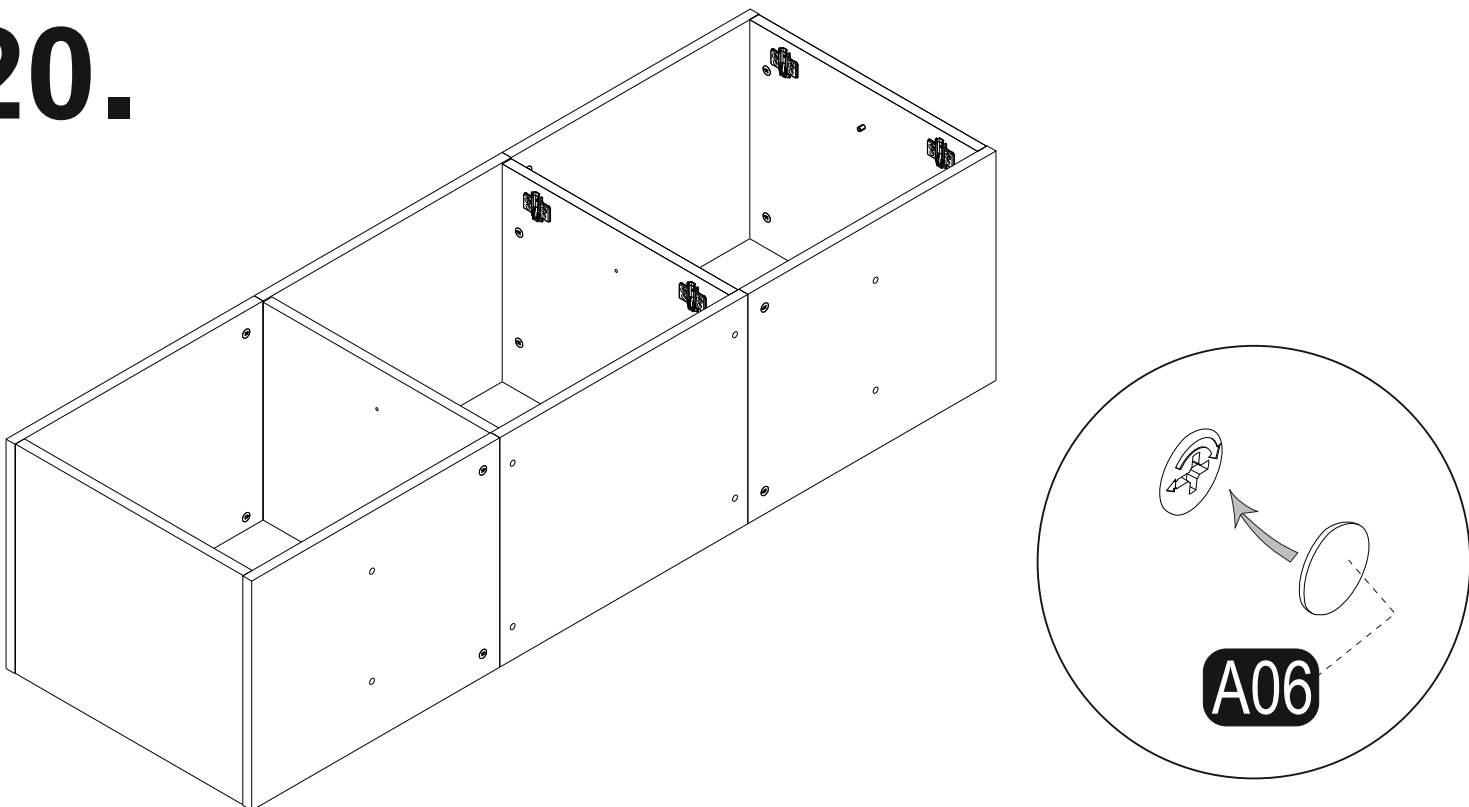


21.

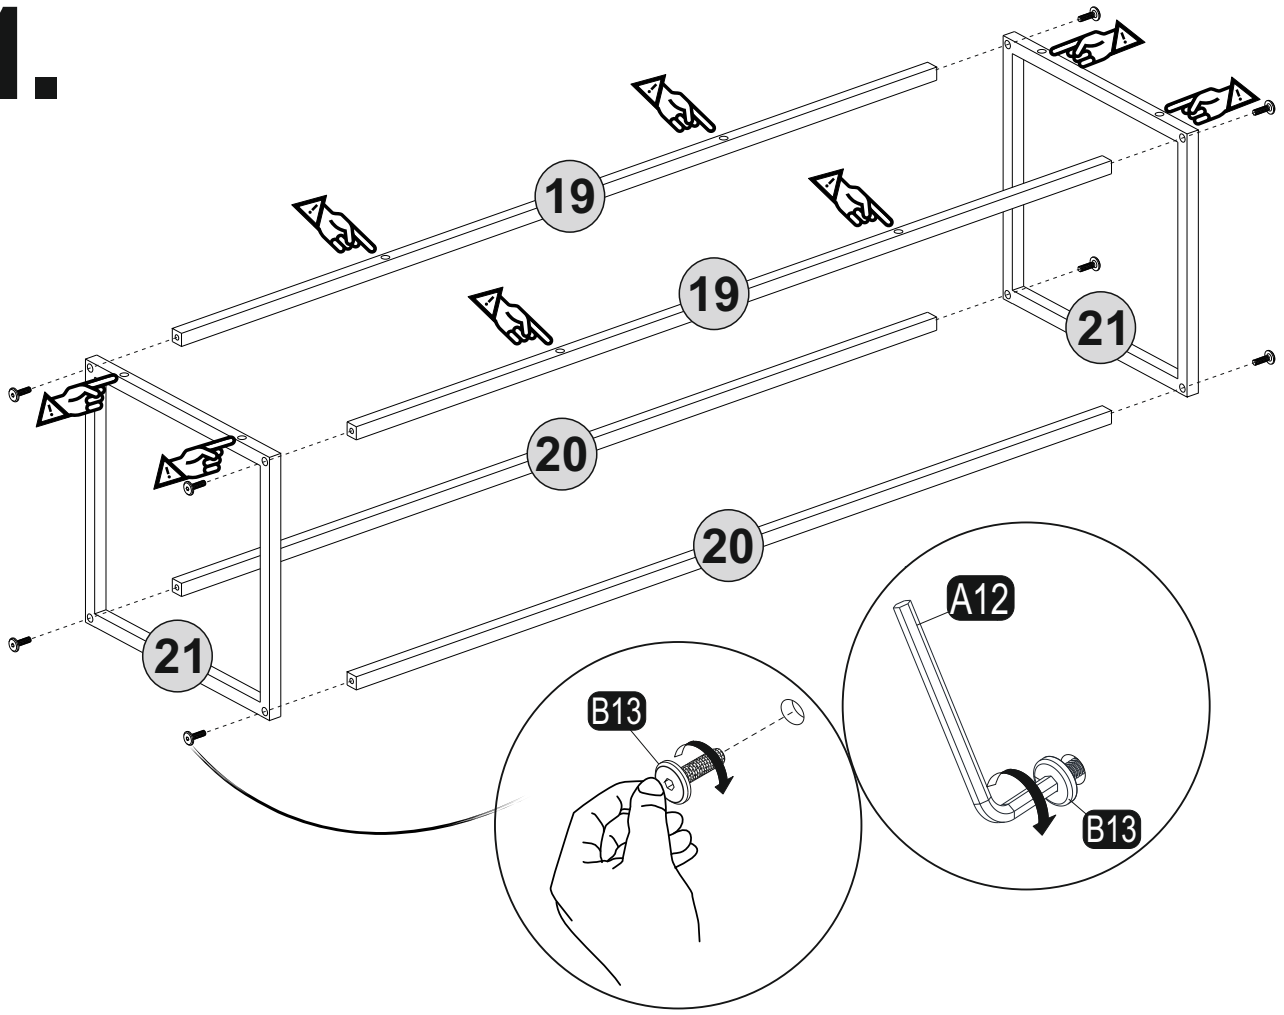


22.

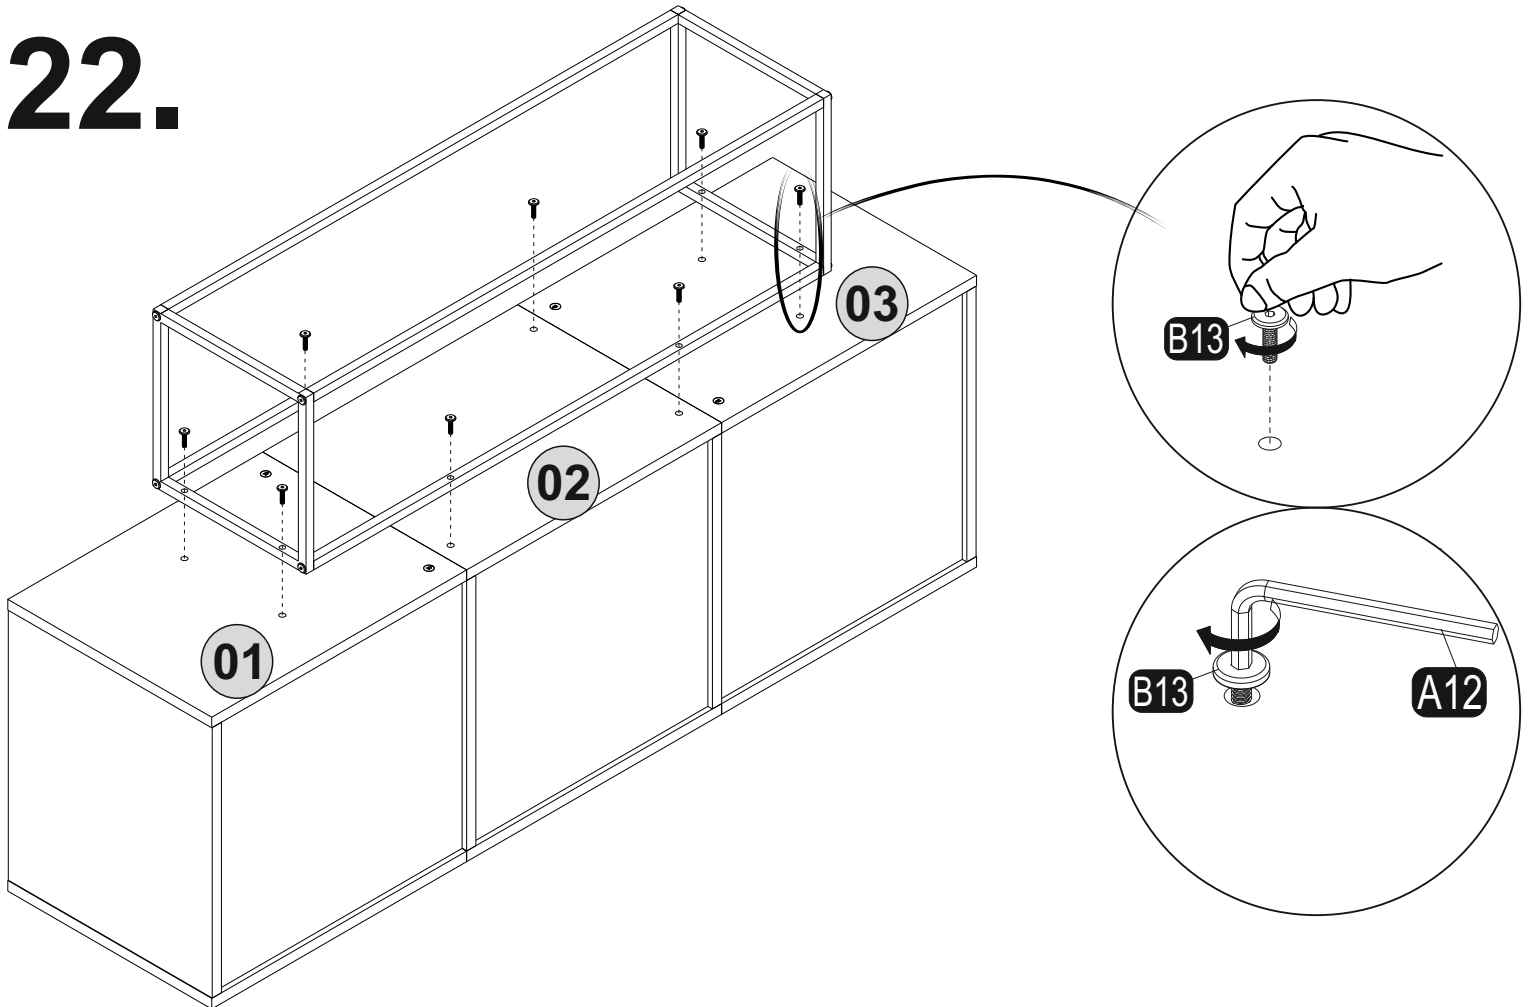


23.

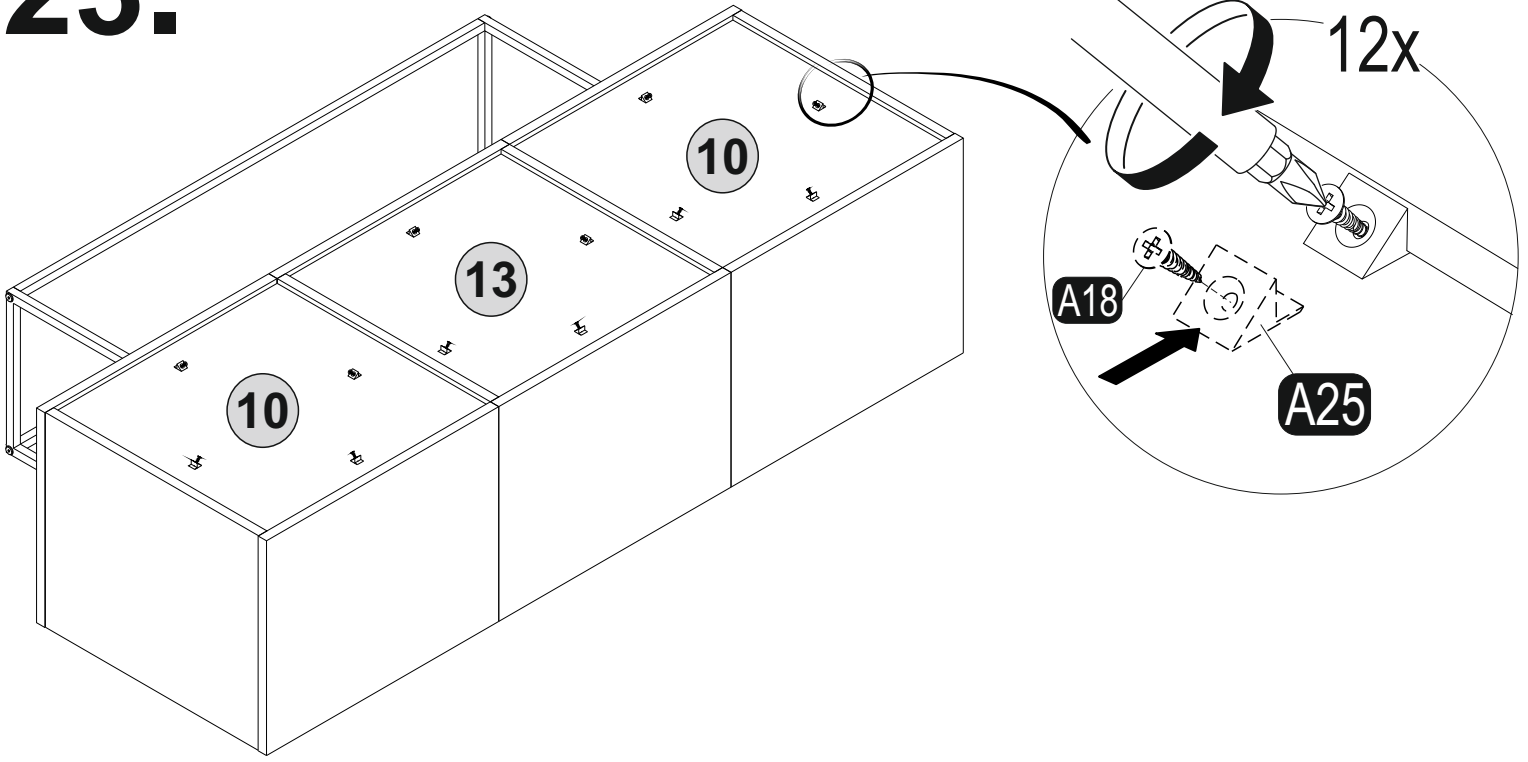


24.

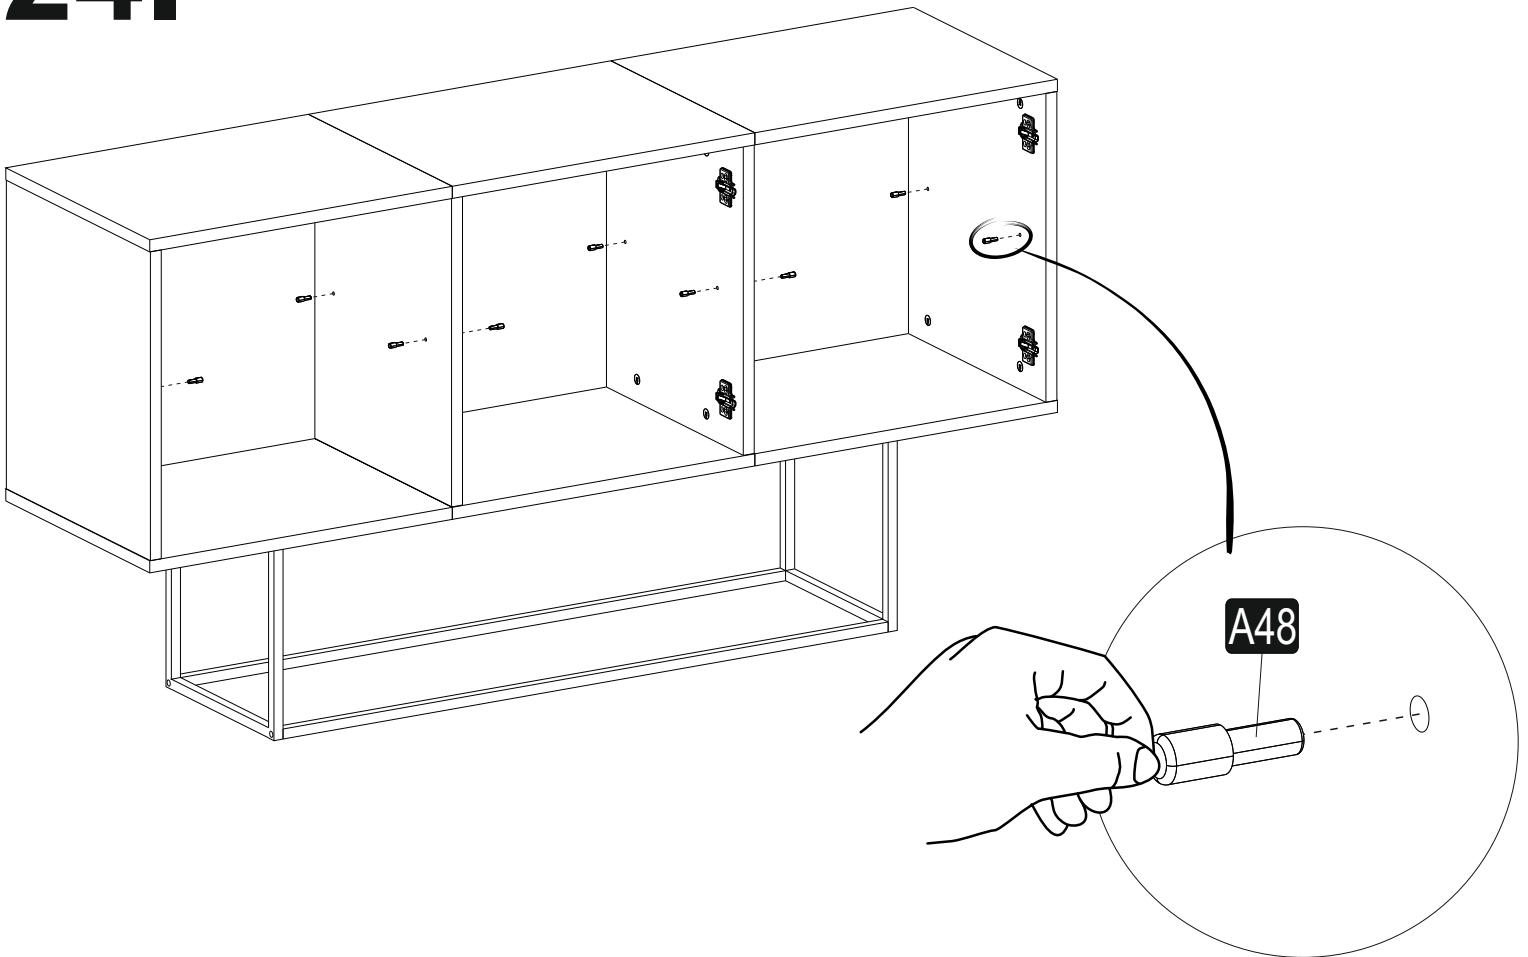





25.

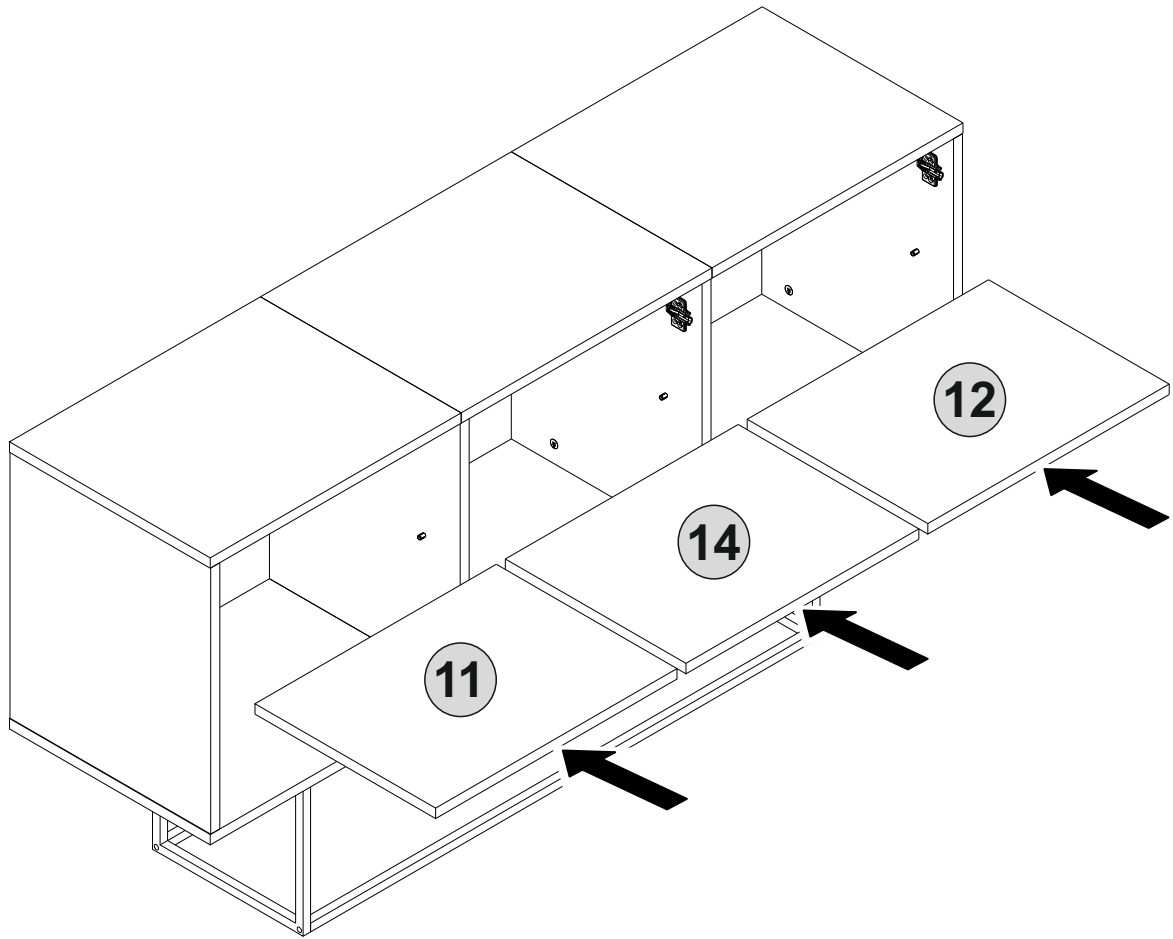

26.

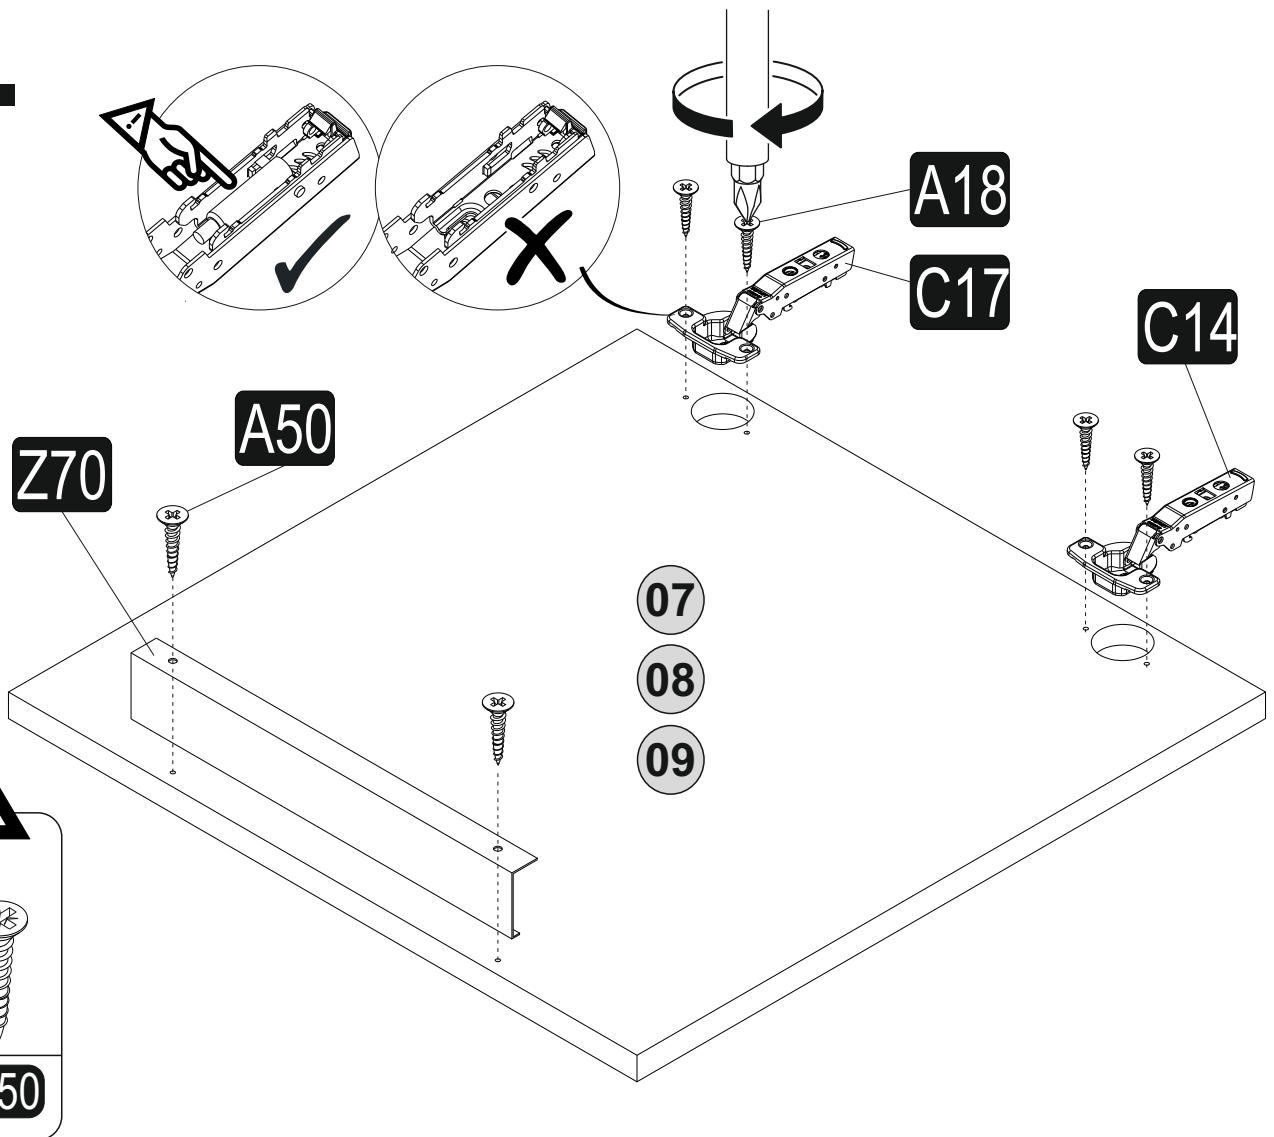

27.

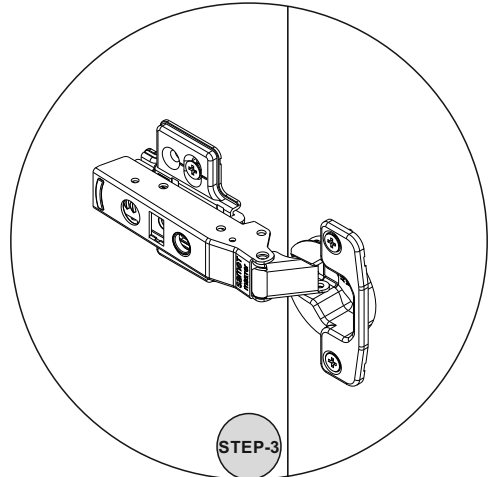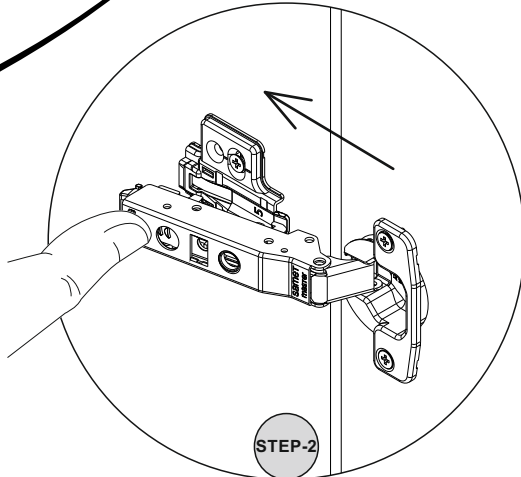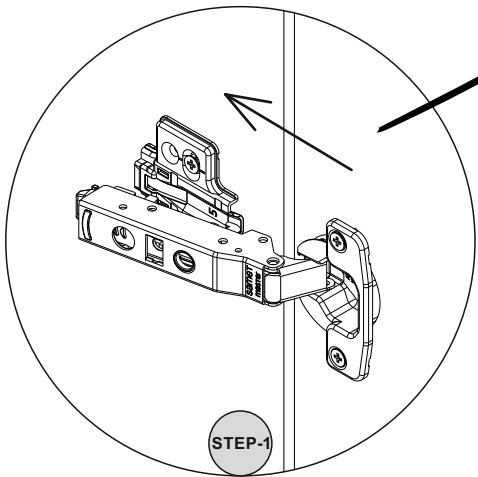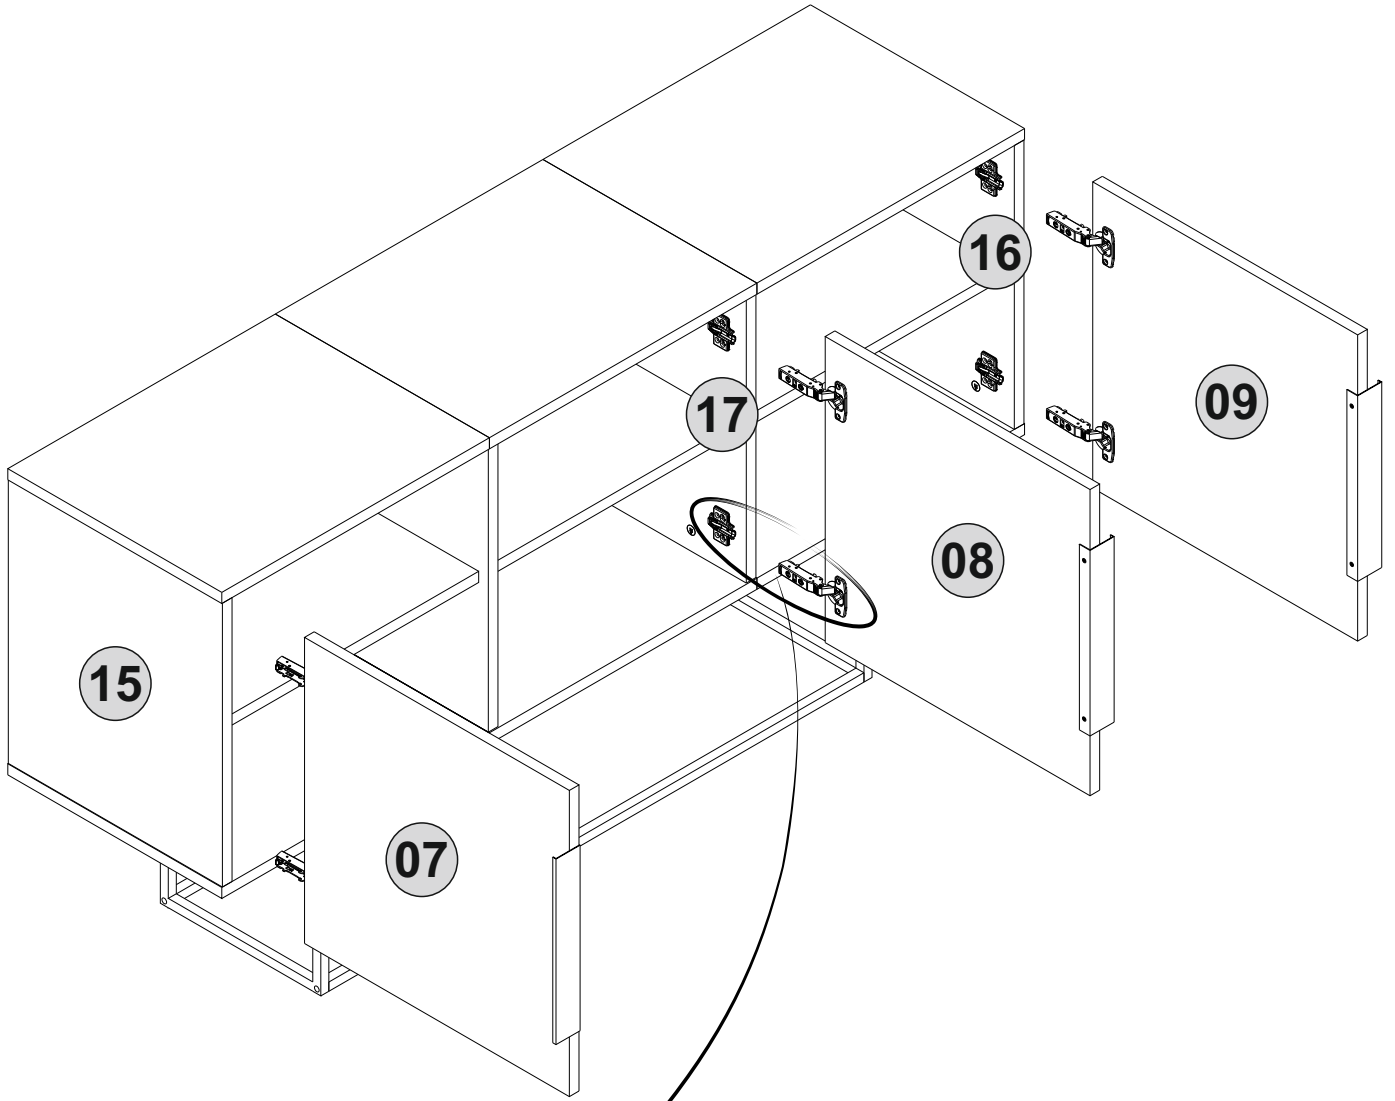

28.

