

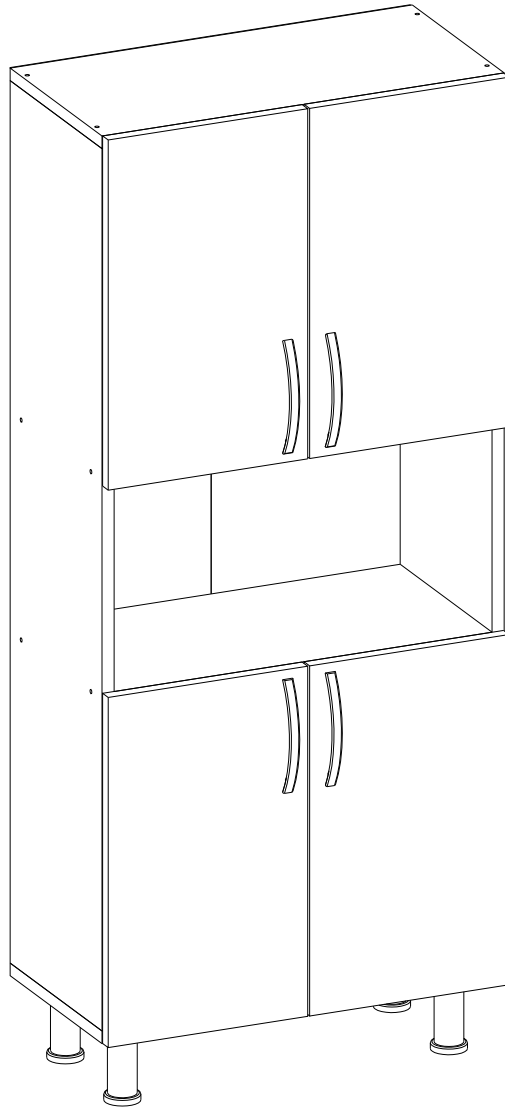






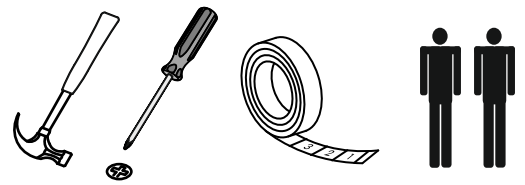



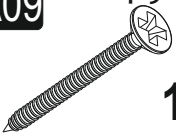



# FLORINE

401418






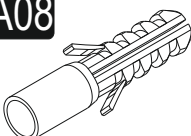
<b>A09</b> 4x50 YHB  <b>18x</b>	<b>A13</b>  <b>8x</b>	<b>A12</b>  <b>8x</b>	<b>A10</b> 3,5x18 YHB  <b>52x</b>	<b>A14</b> M4x22  <b>8x</b>
<b>A24</b> 128 mm  <b>4x</b>	<b>A39</b> 10cm  <b>4x</b>	<b>A23</b>  <b>8x</b>	<b>A16</b>  <b>A 16x</b>	<b>A28</b>  <b>35x</b>
<b>A41</b>  <b>2x</b>	<b>A08</b> Ø8  <b>2x</b>			

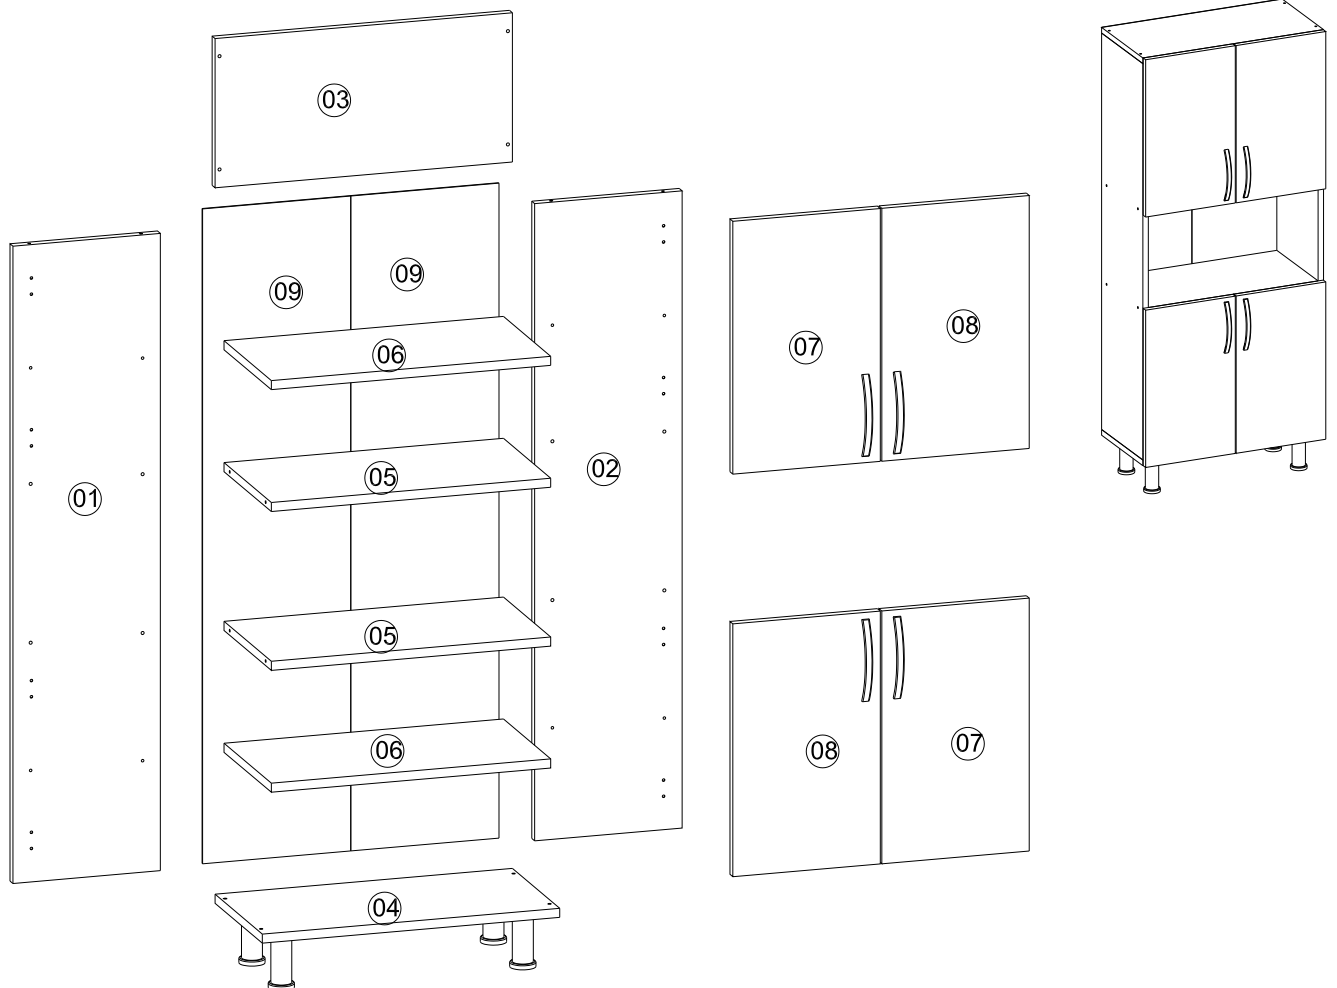


# 1

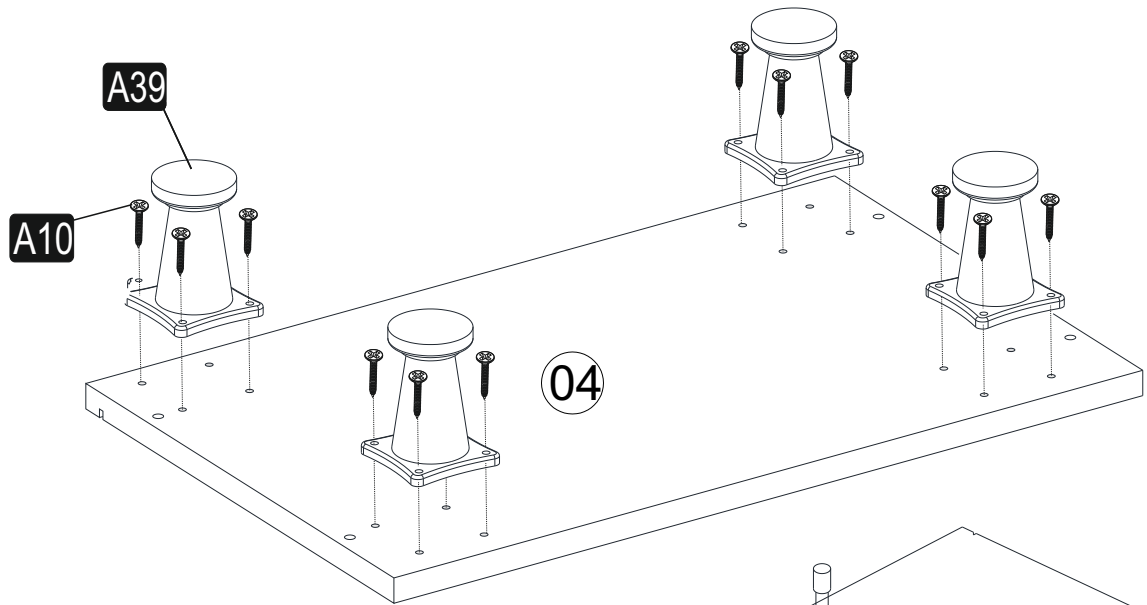


# 2

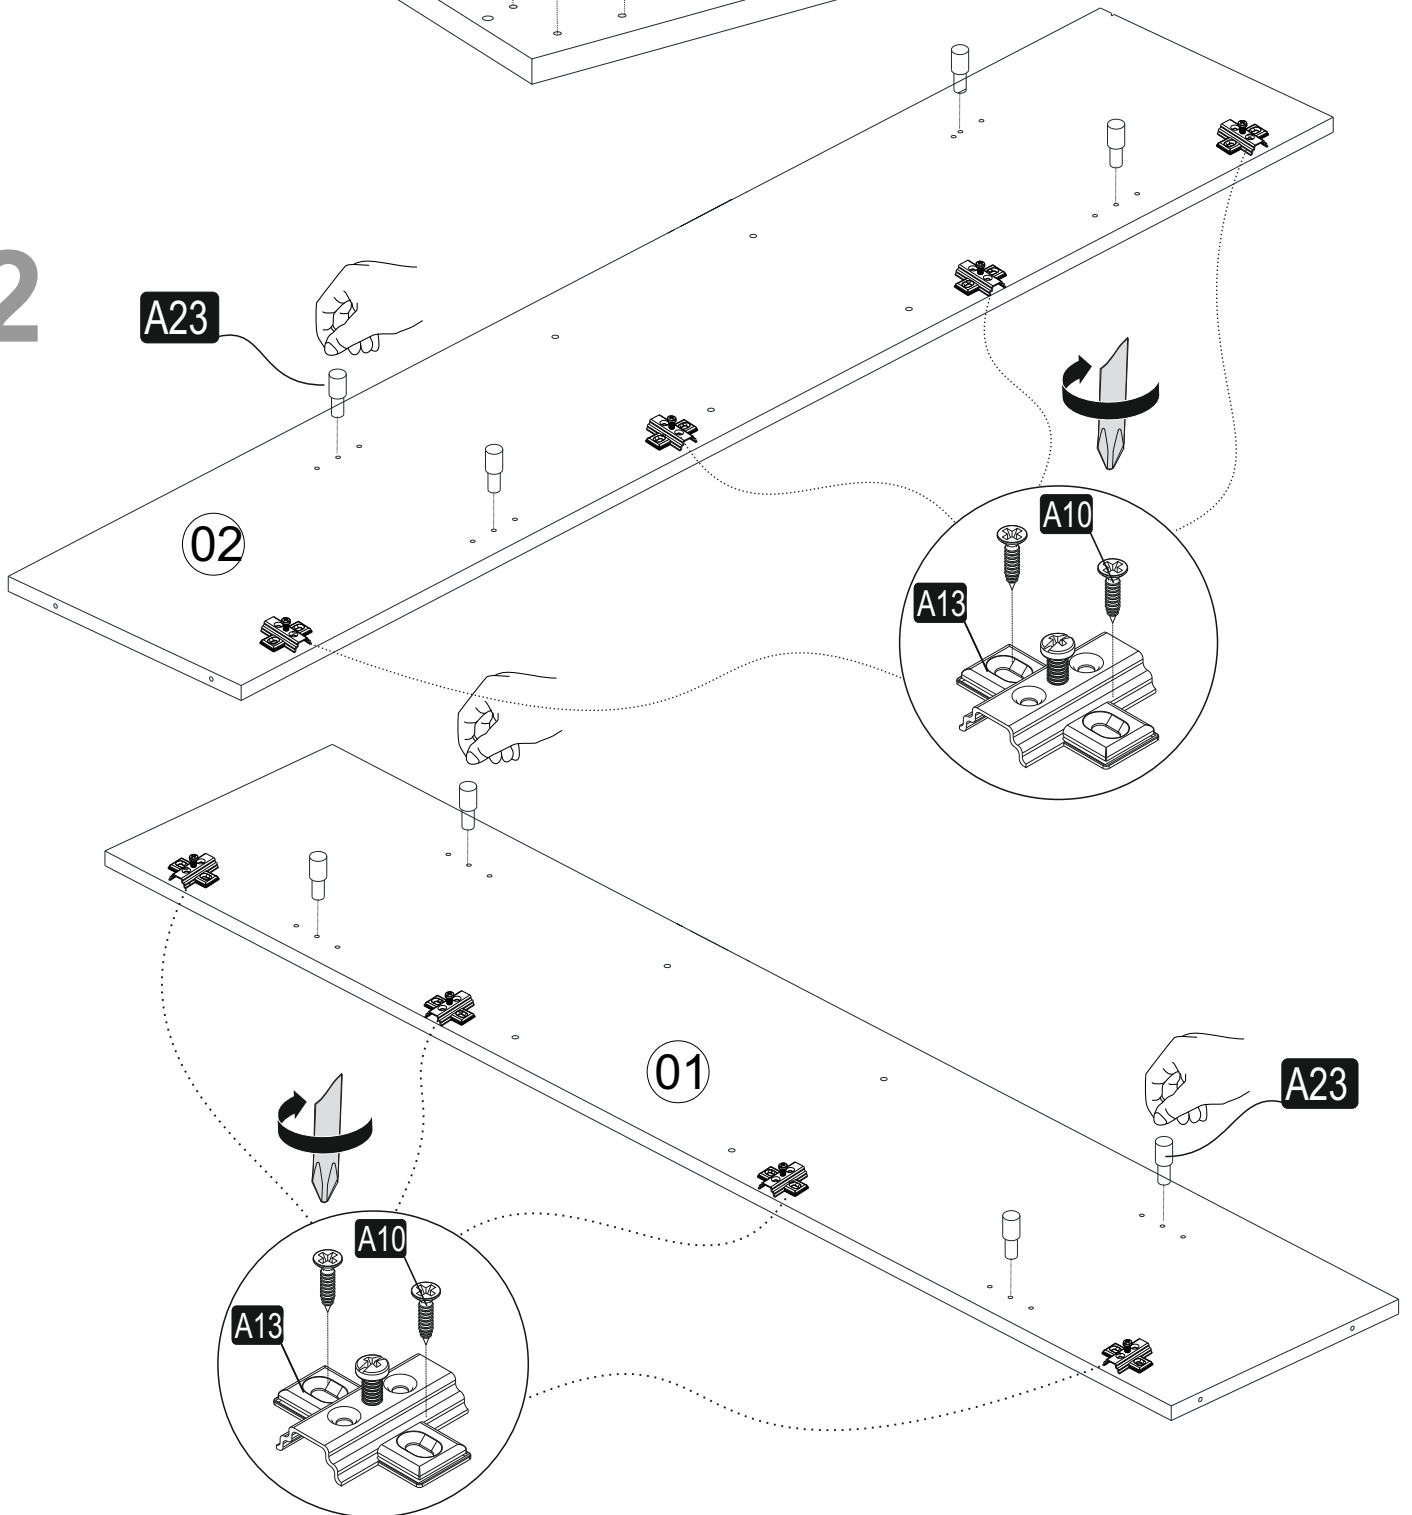


3

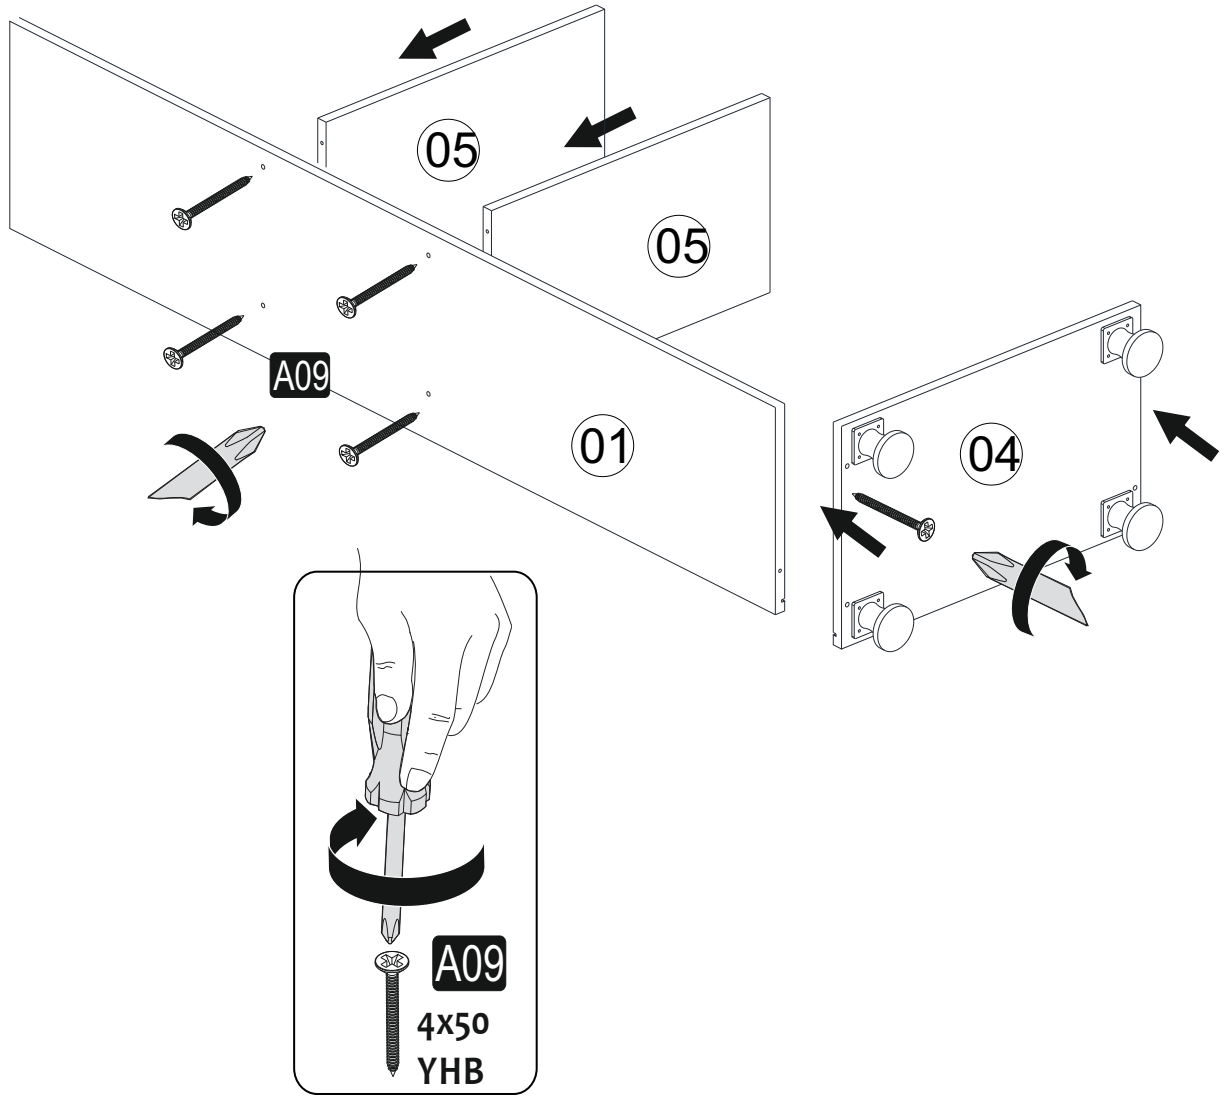






4

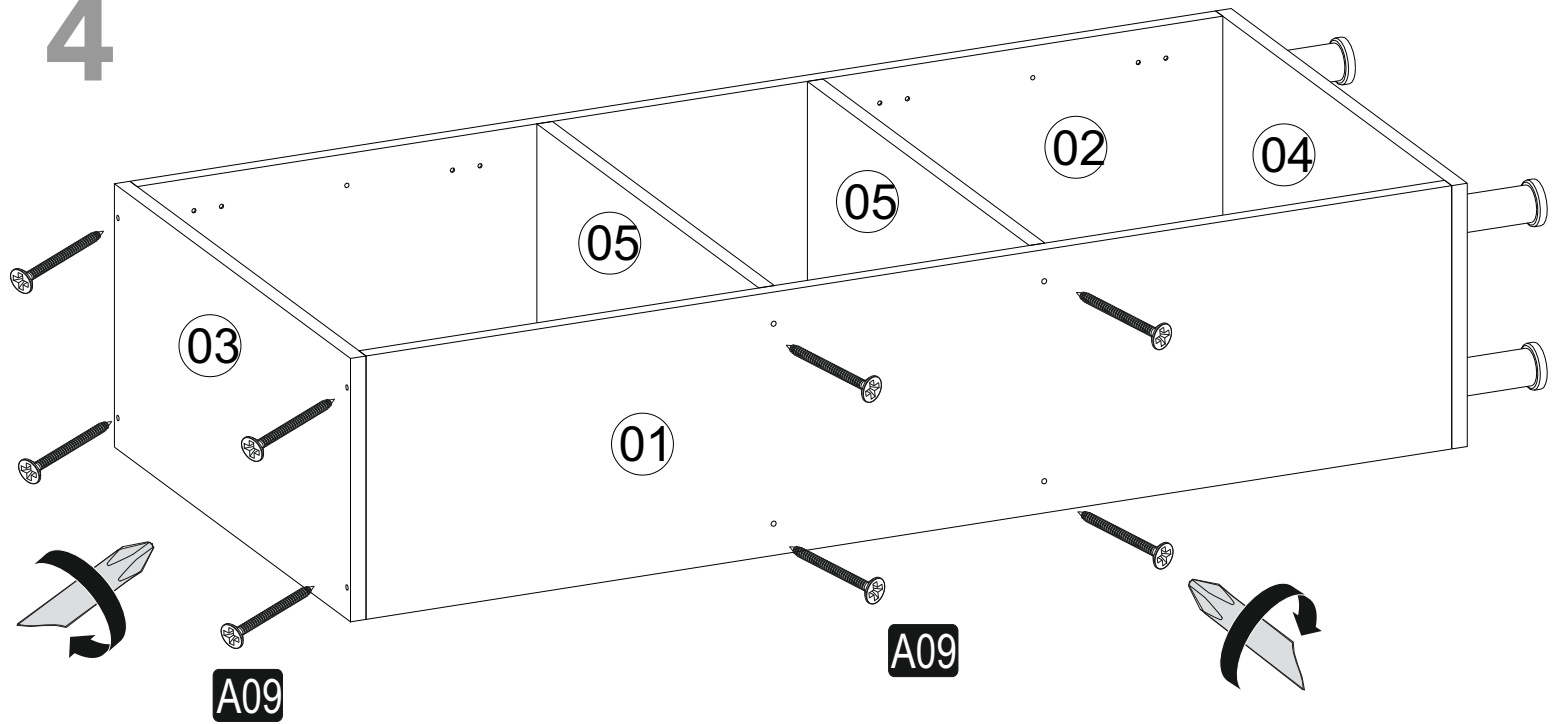




5

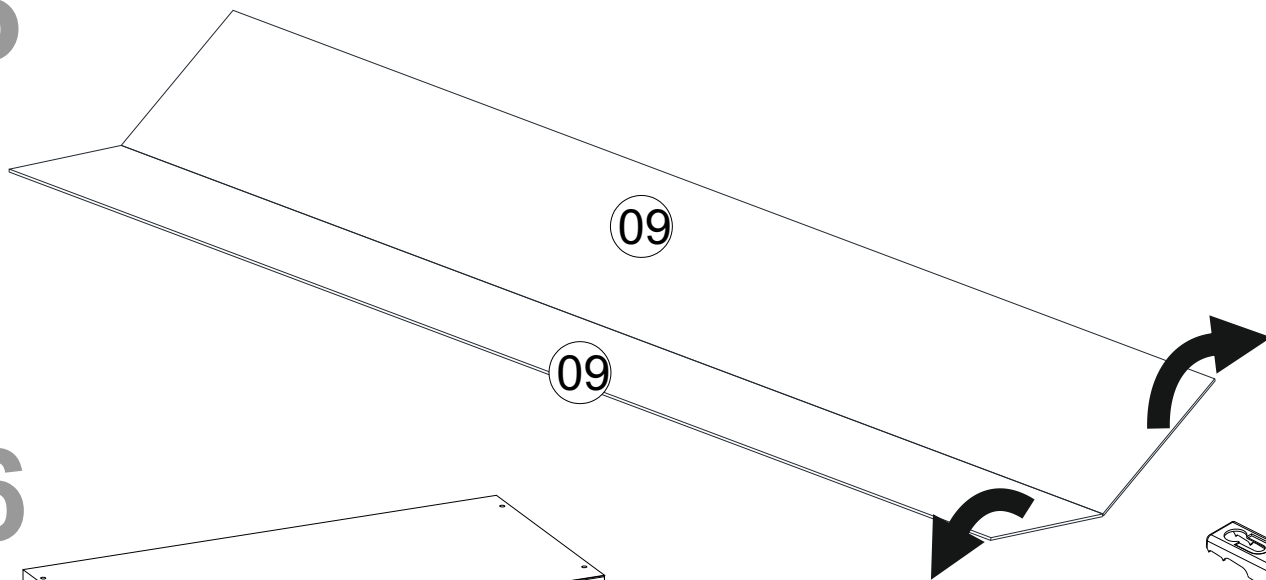



6

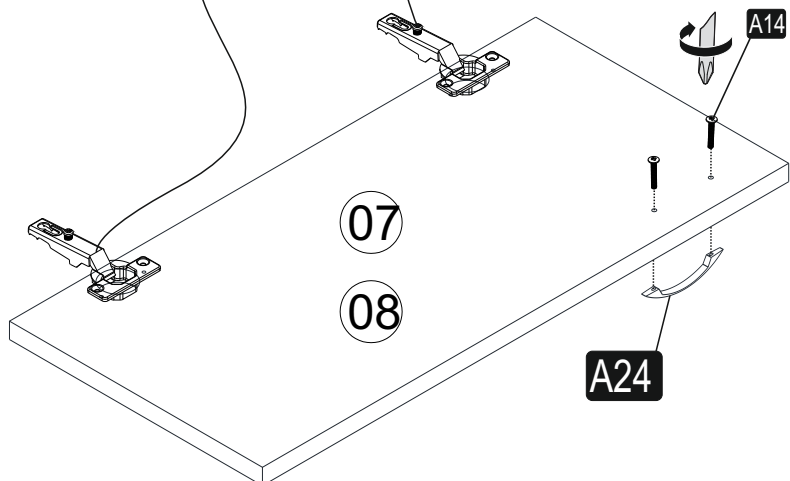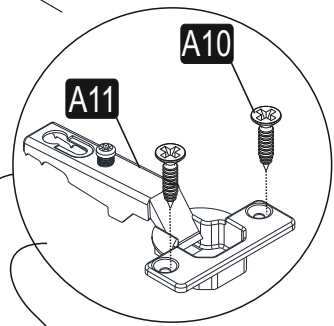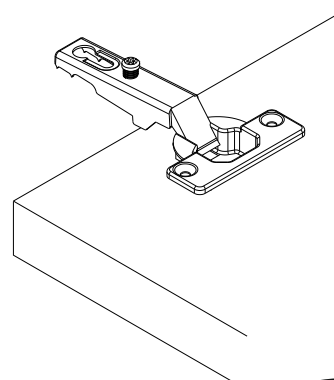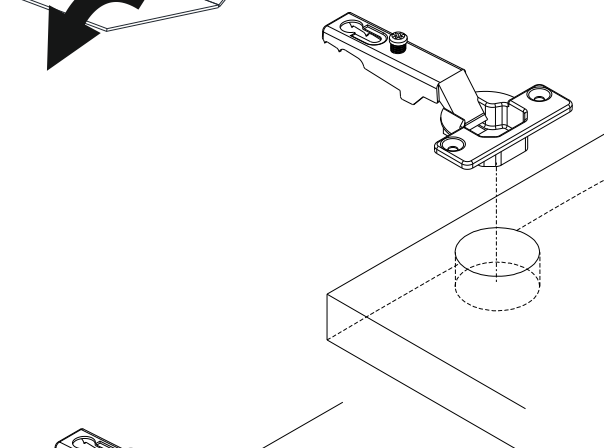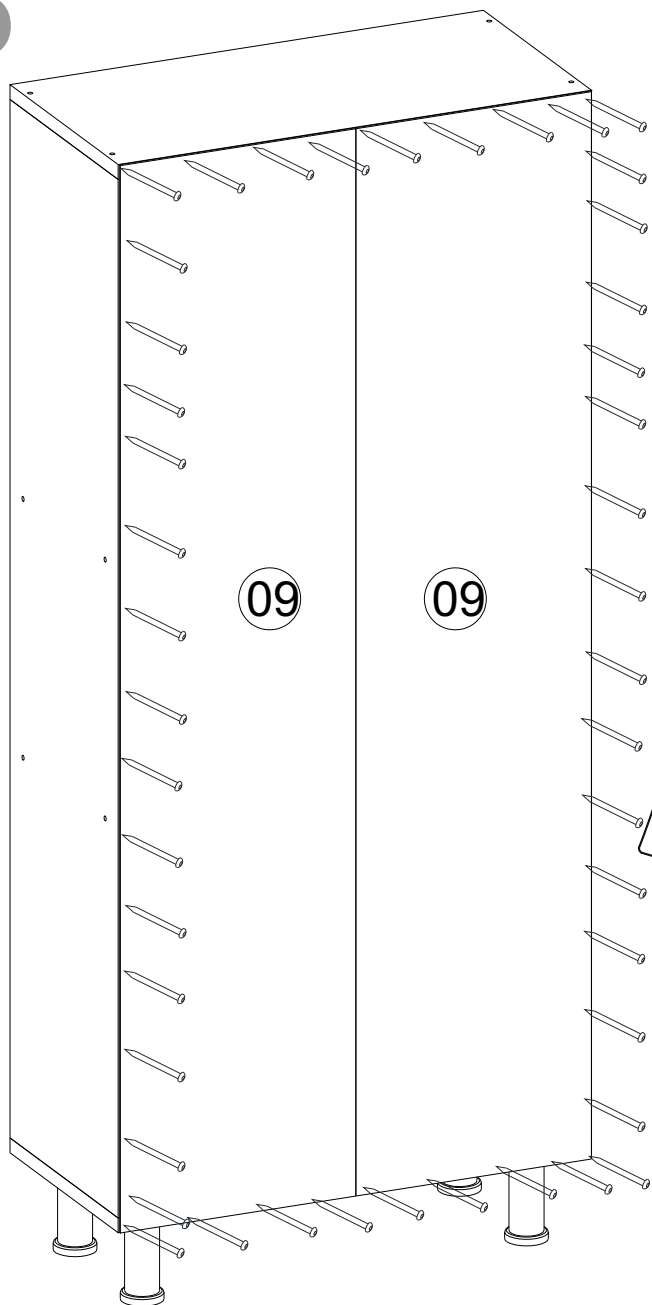





7

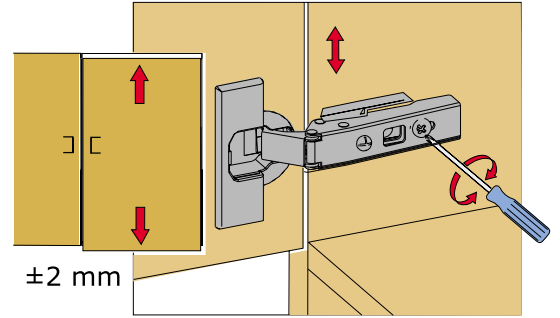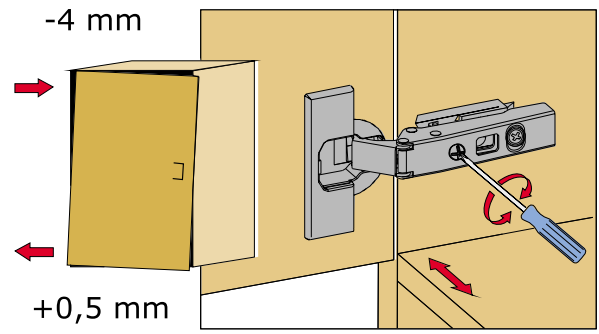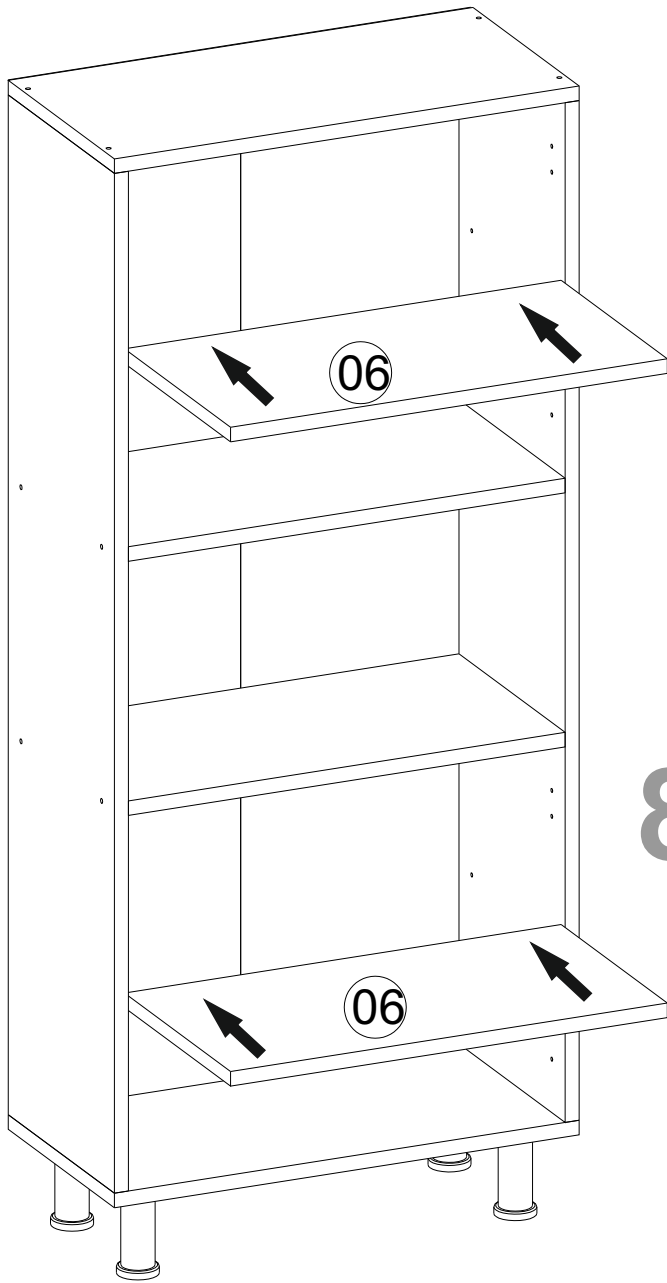

8

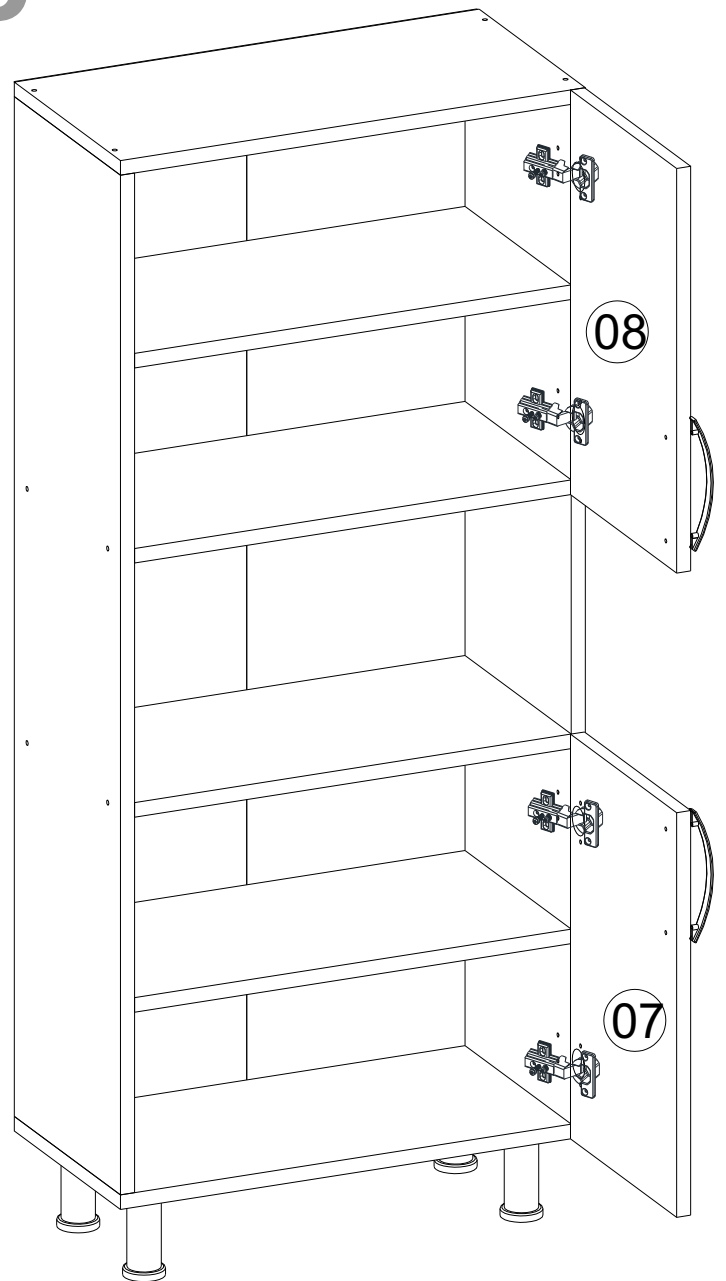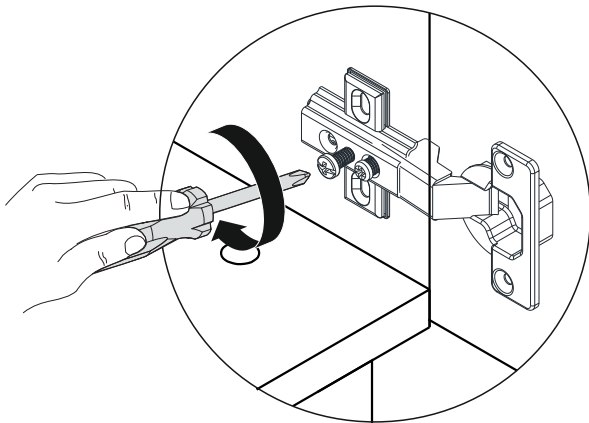

# 9

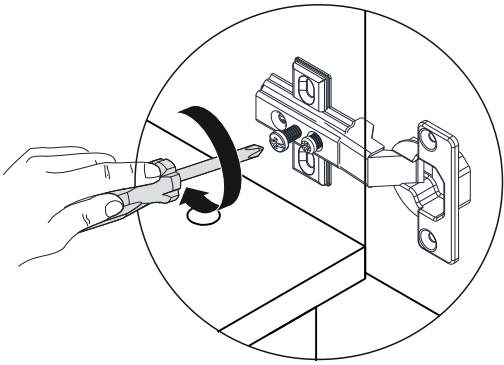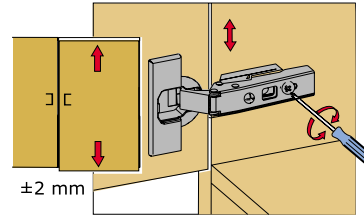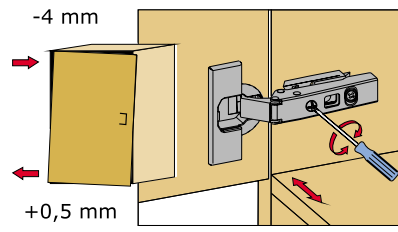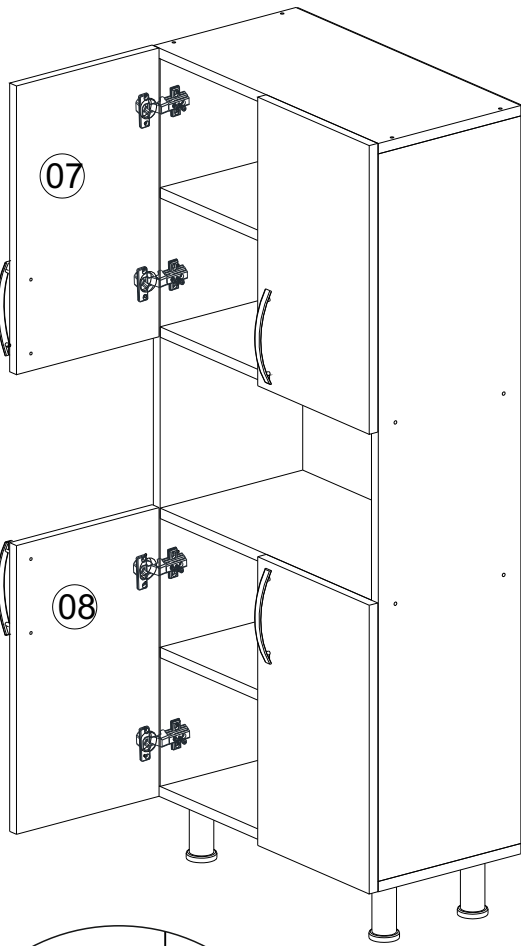

# 10

